



MegaLife



Owner's Manual

Original Instructions

Air Conditioners


Air-to-water Heat Pump Split Unit

Models:

| | |
|---------------------|--------------------|
| ML-RS-CQ8.0Pd/NaE-K | ML-RS-CQ10Pd/NaE-K |
| ML-RS-CQ12Pd/NaE-K | ML-RS-CQ14Pd/NaE-K |
| ML-RS-CQ16Pd/NaE-K | ML-RS-CQ12Pd/NaE-M |
| ML-RS-CQ14Pd/NaE-M | ML-RS-CQ16Pd/NaE-M |

Thank you for choosing our air conditioners. Please read this Owner's Manual carefully before operation and retain it for future reference.

If you have lost the Owner's Manual, please contact the local agent or visit www.megalife.ma.

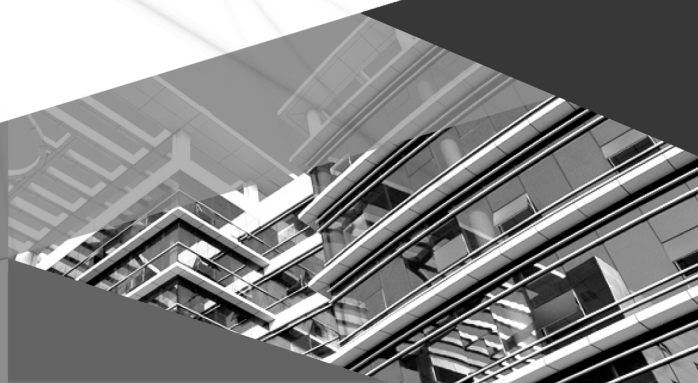

To Users

Thank you for selecting our product. Please read this instruction manual carefully before installing and using the product, so as to master and correctly use the product. In order to guide you to correctly install and use our product and achieve expected operating effect, we hereby instruct as below:


- (1) This equipment should be installed, operated or maintained by the qualified servicemen who have had specific training. During operation, all safety issues covered in the labels, User's Manual and other literature should be followed strictly. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning used of this appliance in a safety way and understand the hazards involved. Children shall not play with the appliances. Cleaning and user maintenance shall not be made by children without supervision.
- (2) This product has gone through strict inspection and operational test before leaving the factory. In order to avoid damage due to improper disassembly and inspection, which may impact the normal operation of unit, please do not disassemble the unit by yourself. You can contact with the special maintenance center of our company if necessary.
- (3) For personal injury or property loss and damage caused by improper operation such as improper installation and debugging, unnecessary maintenance, violation of related national laws and rules and industrial standard, and violation of this instruction manual, etc., we will bear no liability.
- (4) When the product is faulted and cannot be operated, please contact with our maintenance center as soon as possible by providing the following information.
 - Contents of nameplate of product (model, cooling/heating capacity, product No., ex-factory date).
 - Malfunction status (specify the situations before and after the error occurs).
- (5) All the illustrations and information in the instruction manual are only for reference. In order to make the product better, we will continuously conduct improvement and innovation. We have the right to make necessary revision to the product from time to time due to the reason of sales or production, and reserve the right to revise the contents without further notice.
- (6) The final right to interpret for this instruction manual belongs to ML Electronics.


Contents


| | |
|---|-----------|
| Safety Notices (Please be sure to abide) | 1 |
| 1. Diagram of the Operating Principle | 7 |
| 2. Operating Principle of the Unit | 8 |
| 3. Nomenclature | 10 |
| 4. Installation Example | 11 |
| 5. Main Components | 14 |
| 5.1 Indoor unit..... | 14 |
| 5.2 Outdoor unit | 16 |
| 6. Installation Guideline of Outdoor Unit | 19 |
| 6.1 Instruction to installation | 19 |
| 6.2 Installation of outdoor unit..... | 19 |
| 7. Installation of Indoor Unit | 21 |
| 7.1 Select installation location of indoor unit | 21 |
| 7.2 Install process of indoor unit | 22 |
| 7.3 Outline dimension of indoor unit | 24 |
| 7.4 Space requirements for installation..... | 24 |
| 7.5 Precautions on installation of indoor unit | 25 |
| 7.6 Water volume and pump capacity (with pump)..... | 25 |
| 7.7 Water volume and expansion vessel pressure | 25 |
| 7.8 Selection of expansion vessel..... | 26 |
| 8. Connection of Pipeline | 27 |
| 8.1 Connection of outlet pipe for indoor & outdoor unit | 27 |
| 8.2 Installation of protective layer on connection pipe | 27 |
| 9. Remote Air Temperature Sensor | 29 |
| 10. Thermostat | 30 |
| 11. 2-Way Valve | 31 |
| 12. 3-Way Valve | 32 |
| 13. Other Auxiliary Heat Sources | 32 |
| 14. Gate-controller | 32 |
| 15. Charging and Discharging of Refrigerant | 33 |
| 16. Refrigerant Collecting | 34 |
| 17. Handling of the Unit | 35 |
| 18. Installation of Insulated Water Tank | 36 |
| 18.1 Installation measure..... | 36 |
| 18.2 Outline dimension and parameter of water tank | 37 |


| | |
|--|-----------|
| 18.3 Connection of waterway system | 38 |
| 18.4 Electric wiring work | 39 |
| 19. Wring Diagram | 41 |
| 19.1 Control Board..... | 41 |
| 19.2 Electric Wiring..... | 49 |
| 20. Commissioning..... | 53 |
| 20.1 Check before startup..... | 53 |
| 20.2 Test run | 54 |
| 21. Daily Operation and Maintenance | 55 |

Safety Notices (Please be sure to abide)

 **WARNING:** If not abide strictly, it may cause severe damage to the unit or the people.

 **NOTE:** If not abide strictly, it may cause slight or medium damage to the unit or the people.

 This sign indicates that the operation must be prohibited. Improper operation may cause severe damage or death to people

 This sign indicates that the items must be observed. Improper operation may cause damage to people or property.

NOTE

After receipt of the unit, check it for appearance, unit model compared with your desire and attachments.

Design and installation work of the unit must be performed by authorized personnel according to applicable laws and regulations and this Instruction.

After installation work, the unit cannot be energized unless there is not any problem in check.

Ensure periodical clean and maintenance of the unit after normal operation of the unit for longer life and reliable operation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance shall be installed in accordance with national wiring regulations.





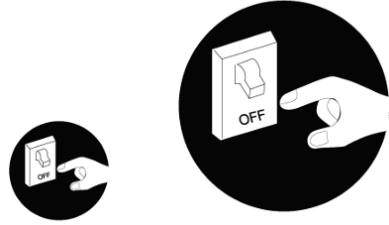

This product is a kind of comfort air conditioning, and is not allowed to be installed where there are corrosive, explosive and inflammable substances or smog; otherwise it would lead to operation failure, shortened service life, five hazard or even severe injuries. Special air conditions are required for where mentioned above.




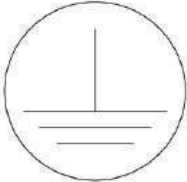
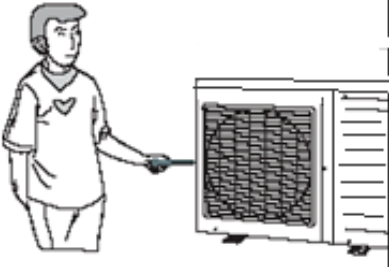




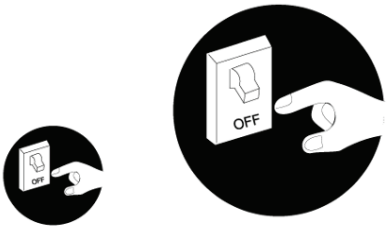


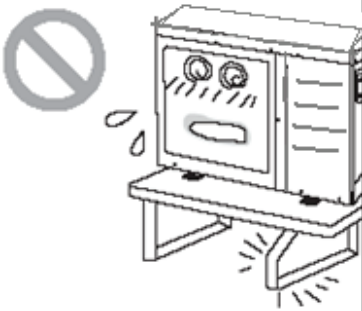
Correct Disposure


This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

R410A(R32/125:50/50):2087.5

| ⚠ WARNING | | |
|---|---|--|
| <p>Once abnormality like burning smell occurs, please cut off the power supply immediately and then contact with service center.</p>  <p>If the abnormality still exists, the unit may be damaged and electric shock or fire may result.</p> | <p>Don't operate the unit with wet hand.</p>  <p>Otherwise, it may cause electric shock.</p> | <p>Before installation, please see if the voltage of local place accords with that on nameplate of unit and capacity of power supply, power cord or socket is suitable for input power of this unit.</p>  |
| <p>Special circuit must be adopted for power supply to prevent fire.</p>  <p>Do not use octopus multipurpose plug or mobile terminal board for wire connection.</p> | <p>Be sure to pull out the power plug and drain the indoor unit and water tank when unit is not in use for a long time.</p>  <p>Otherwise, the accumulated dust may cause overheating, fire or freeze of water tank or coaxial heater exchanger in winter.</p> | <p>Never damage the electric wire or use the one which is not specified.</p>  <p>Otherwise, it may cause overheating or fire.</p> |

| | | |
|--|--|--|
| <p>Before cleaning please cut off the power supply.</p>   <p>Otherwise, it may cause electric shock or damage.</p> | <p>The power supply must adopt special circuit with leakage switch and enough capacity.</p> | <p>User can not change power cord socket without prior consent. Wiring working must be done by professionals. Ensure good earthing and don't change earthing mode of unit.</p> |
| <p>Earthing: the unit must be earthed reliably ! The earthing wire should connect with special device of buildings.</p>   <p>If not, please ask the qualified personnel to install. Furthermore, don't connect earth wire to gas pipe, water pipe, drainage pipe or any other improper places which professional does not recognize.</p> | <p>Never insert any foreign matter into outdoor unit to avoid damage . And never insert your hands into the air outlet of outdoor unit.</p>  | <p>Don't attempt to repair the unit by yourself.</p>   <p>Improper repair may cause electric shock or fire, so you should contact the service center to repair.</p> |

| | | |
|--|---|--|
| <p>Don't step on the top of the unit or place anything on it.</p>  <p>There is the danger of fall of things or people.</p> | <p>Never block the air inlet and outlet of unit.</p>  <p>It may reduce efficiency or cause stop of the unit and even fire.</p> | <p>Keep pressurized spray, gas holder and so on away from the unit above 1m .</p>  <p>It may cause fire or explosion.</p> |
| <p>Please note whether the installation stand is firm enough or not.</p>  <p>If damaged, it may cause fall of the unit and injury of people.</p> | <p>Unit should be installed at the place with good ventilation to save energy.</p> | <p>When there is not water in water tank, never power the unit on to run.</p> |

 **NOTE**

Before installation, please check if the adopted power is accordance with that listed on nameplate, and check the safety of power.

An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.

Before using, please check and confirm if wires and water pipes are connected correctly to avoid water leakage, electric shock or fire etc.

Don't operate the unit with wet hand, and don't allow children to operate the unit.

The On/off in the instruction is for the operation to on and off button of PCB for users; cut off power means to stop supplying power to the unit.

Don't directly expose the unit under the corrosive ambient with water or dampness.

Don't operate the unit without water in water tank .The air outlet/inlet of unit cannot be blocked by other objects.

The water in unit and pipeline should be discharged if the unit is not in use, to prevent the water tank, pipe line and water pump from frost-cracking.

Never press the button with sharp objects to protect manual controller. Never use other wires instead of special communication line of the unit to protect control elements. Never clean the manual controller with benzene, thinner or chemical cloth to avoid fading of surface and failure of elements. Clean the unit with the cloth soaked in neutral eradicator. Slightly clean the display screen and connecting parts to avoid fading.

The power cord must be separated with the communication line.

maximum and minimum water operating temperatures.

| Item | Minimum water operating temperatures | Maximum water operating temperatures |
|---------------|--------------------------------------|--------------------------------------|
| Cooling | 7°C | 25°C |
| Heating | 25°C | 55°C |
| Water heating | 40°C | 80°C |

maximum and minimum water operating pressures.

| Item | Minimum water operating pressures | Maximum water operating pressures |
|---------------|-----------------------------------|-----------------------------------|
| Cooling | 0.05MPa | 0.25MPa |
| Heating | | |
| Water heating | | |

maximum and minimum entering water pressures.


| Item | Minimum entering water pressures | Maximum entering water pressures |
|---------------|----------------------------------|----------------------------------|
| Cooling | 0.05MPa | 0.25MPa |
| Heating | | |
| Water heating | | |

The range of external static pressures at which the appliance was tested (add-on heat pumps, and appliances with supplementary heaters, only); If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance is intended to be permanently connected to the water mains and not connected by a hose-set.

If there is any question, please contact with local dealer, authorized service center, agencies or our company directly.

1. Diagram of the Operating Principle

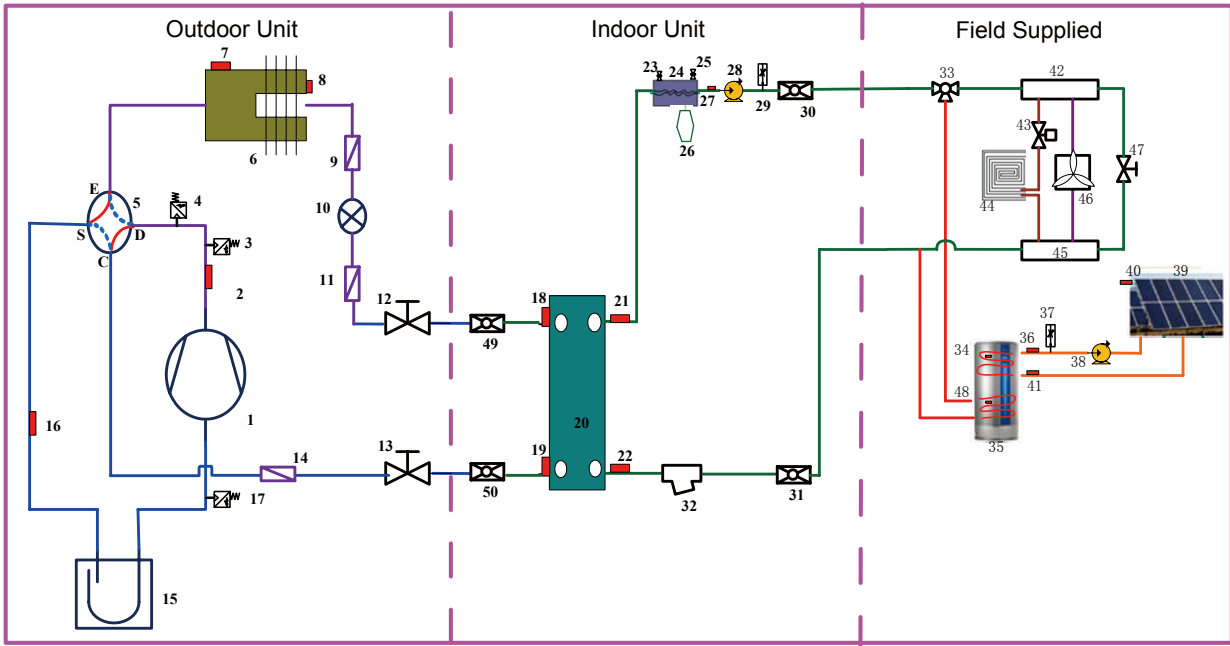

| No. | Name | No. | Name | No. | Name |
|-----|--------------------------------|-----|---|-----|--|
| 1 | Compressor | 18 | Liquid Temperature Sensor of the PHE | 35 | Water Tank |
| 2 | Discharge Temperature Sensor | 19 | Gas Temperature Sensor of the PHE | 36 | Leaving Water Temperature Sensor of the Solar System |
| 3 | High Pressure Switch | 20 | Plate-type Exchanger | 37 | Flow Switch for the Solar System |
| 4 | Pressure Sensor | 21 | Leaving Water Temperature of the PHE | 38 | Water Pump for the Solar System |
| 5 | 4-way Valve | 22 | Entering Water Temperature of the PHE | 39 | Solar Panel |
| 6 | Finned Exchanger | 23 | Automatic Exhaust Valve | 40 | Solar Panel Temperature Sensor |
| 7 | Environment Temperature Sensor | 24 | Electric Heater | 41 | Entering Water Temperature for the Solar System |
| 8 | Defrosting Temperature Sensor | 25 | Safety Valve | 42 | Water Knockout Vessel |
| 9 | Filter | 26 | Expansion Tank | 43 | Electric 2-way Valve 1 |
| 10 | Electrostatic Expansion Valve | 27 | Leaving Water Temperature of the Electric Heate | 44 | Floor Radiator |
| 11 | Filter | 28 | Water Pump | 45 | Water Collector |
| 12 | Liquid Valve | 29 | Flow Switch | 46 | FCU |
| 13 | Gas Valve | 30 | Leaving Water Pipe Connector | 47 | Pressure Differential Bypass Valve |
| 14 | Filter | 31 | Entering Water Pipe Connector | 48 | Water Tank Temperature Sensor 2 |
| 15 | Vapor-liquid Separator | 32 | Water Filter | 49 | Liquid Valve Connector |
| 16 | Suction Temperature Sensor | 33 | Electric 3-way Valve 2 | 50 | Gas Valve Connector |
| 17 | Pressure Sensor | 34 | Water Tank Temperature Sensor 1 | | |

2. Operating Principle of the Unit

DC Inverter Air to Water Heat Pump is composed of outdoor unit, indoor unit and internal-fan coil water tank.

Operation functions:

- (1) Cooling;
- (2) Heating;
- (3) Water heating;
- (4) Cooling +water heating;
- (5) Heating+ water heating;
- (6) Emergency mode;
- (7) Quick water heating;
- (8) Holiday mode;
- (9) Forced Operation Mode;
- (10) Silent mode;
- (11) Disinfection mode;
- (12) Weather-dependent Operation;
- (13) Floor debugging;
- (14) Air removal of the water system;
- (15) Solar water heater;
- (16) Backup heat source

Cooling: in cooling mode, the refrigerant is condensed in the outdoor unit and evaporated in the indoor unit. Via the heat exchange with water in the indoor unit, the temperature of water decreases and it releases heat while the refrigerant absorbs heat and evaporates. With the help of wired controller, the outflow temperature can meet the user's requirement. Through the control of valve, the low-temperature water in the system is connected with indoor fan coil and underground pipe, and exchanges heat with the indoor air so that the indoor temperature decreases to the required range.

Heating: in heating mode, the refrigerant evaporates in the outdoor unit and is condensed in the indoor unit. Via the heat exchange with water in the indoor unit, the water absorbs heat and its temperature increases while the refrigerant releases heat and is condensed. With the help of wired controller, the outflow temperature can meet the user's requirement. Through the control of valve, the high-temperature water in the system is connected with indoor fan coil and underground pipe, and exchanges heat with the indoor air so that the indoor temperature increases to the required range.

Water heating: in water heating mode: the refrigerant evaporates in the outdoor unit and is condensed in the indoor unit. Via the heat exchange with water in the indoor unit, the water absorbs heat and its temperature increase while the refrigerant releases heat and is condensed. With the help of wired controller, the outflow temperature can meet the user's requirement. Through the control of valve, the high-temperature water in the system is connected with the coil pipe of bearing water tank, and exchanges heat with the water in the water tank so that the temperature of water tank increases to the required range.

Cooling + water heating: when cooling mode exists together with the water heating mode, the user can set the priority of these two modes based on the needs. The default priority is heat pump. That is under the default setting, if cooling mode exists together with the water heating mode, the heat pump gives priority to cooling. In that case, water heating can only realized with e-heater of the water tank. Inversely, the heat pump gives priority to water heating and switches to cooling after finishing water heating.

Heating+ water heating: when heating mode exists together with the water heating mode, the user can set the priority of these two modes based on the needs. The default priority is heat pump. That is under the default setting, if heating mode exists together with the water heating mode, the heat pump gives priority to heating. In that case, water heating can only realized with e-heater of the water tank. Inversely, the heat pump gives priority to water heating and switches to heating after finishing water heating.

Emergency mode: this mode is only available for heating and water heating. When the outdoor unit stops due to malfunction, enter the corresponding emergency mode; as to heating mode, after entering the emergency mode, heating can only be realized through e-heater of the indoor unit. When the setting outflow temperature or indoor temperature is reached, the e-heater of indoor unit will stop running; as to water heating mode, the e-heater of indoor unit stops while the e-heater of water tank runs. When the setting temperature or water tank is reached, the e-heater will stop running.

Quick water heating: in quick water heating mode, the unit runs according to the water heating control of heat pump and the e-heater of water tank runs at the same time.

Forced operation mode: this mode is only used for refrigerant recovery and debugging for the unit.

Holiday mode: this mode is only available for heating mode. This mode is set to keep indoor temperature or leaving water temperature in a certain range, so as to prevent water system of the unit from freezing or protect certain indoor articles from freezing damage. When the outdoor unit stops due to malfunction, the two e-heaters of the unit will run.

Disinfection mode: in this mode, the water heating system can be disinfected. When starting up the disinfection function and setting corresponding time to meet the requirement of disinfection mode, the function will start. After the setting temperature is reached, this mode will terminate.

Weather-dependent operation: this mode is only available for space heating or space cooling. In Weather-dependent mode, the setting value (remote room air temperature or leaving water temperature) is detected and controlled automatically when the outdoor air temperature is changed.

Quiet mode: silent mode is available in cooling, heating and water heating mode. In silent mode, the outdoor unit will reduce the running noise via automatic control.

Floor commissioning: this function is intended to preheat the floor periodically for the initial use.

Air removal of the water system: this function is intended to replenish water and remove air in the water system to make the equipment run at the stabilized water pressure.

Solar water heater: when the condition for starting the solar water heater is satisfied, the solar heater will start to heat the circulation water. Then the heated water will go to the water tank and exchange heat with water in it. At any condition, the solar water heater will be given priority for startup so as for energy conservation.

Backup heat source: when the outdoor temperature is lower than the set point for starting the backup heat source and the unit is under the error condition and the compressor has stopped for three minutes, then the backup heat source will start to supply heat or hot water to the room.

3. Nomenclature

| | | | | | | | | | | | | |
|-----------|-----------|----------|----------|----------|-----------|-----------|----------|-----------|----------|----------|----------|------------|
| ML | RS | - | C | Q | 16 | Pd | / | Na | E | - | M | (O) |
| 1 | 2 | | 3 | 4 | 5 | 6 | | 7 | 8 | | 9 | 10 |

| NO. | Description | Options |
|-----|------------------------------|---|
| 1 | ML Electronics | ML-ML Electronics Air to water heat pump |
| 2 | Heat Pump Water Heater | RS |
| 3 | Heating Mode | S= Static; C=Circulating |
| 4 | Function | Q=Multi-function; Omit=Single-function |
| 5 | Nominal Heating Capacity | 6.0=6.0kW; 8.0=8.0kW;10=10kW; 12=12kW; 14=14kW; 16=16kW |
| 6 | Compressor Style | Pd=DC Inverter; Omit=On/Off |
| 7 | Refrigerant | Na=R410A |
| 8 | Design Serial Number | B,C,D,E..... |
| 9 | Power Supply | K=220-240V,~,50Hz;M=380-415V,3N~,50Hz;H=380V,3N~,60Hz |
| 10 | Indoor and Outdoor Unit Code | I=Indoor unit; O=Outdoor unit |

Model Line-Up

| Model Name | Capacity | | Power supply |
|---------------------|--------------------------|--------------------------|---------------------|
| | Heating ¹ ,kW | Cooling ² ,kW | |
| ML-RS-CQ8.0Pd/NaE-K | 8 | 7.8 | 220-240VAC 50Hz |
| ML-RS-CQ10Pd/NaE-K | 10 | 8.2 | |
| ML-RS-CQ12Pd/NaE-K | 12 | 12.5 | |
| ML-RS-CQ14Pd/NaE-K | 14 | 13.5 | |
| ML-RS-CQ16Pd/NaE-K | 15.5 | 14.5 | |
| ML-RS-CQ12Pd/NaE-M | 12 | 13.5 | 380-415VAC 3Ph 50Hz |
| ML-RS-CQ14Pd/NaE-M | 14 | 14.5 | |
| ML-RS-CQ16Pd/NaE-M | 15.5 | 15 | |

Notes


- (a) ¹Capacities and power inputs are based on the following conditions:
 Indoor Water Temperature 30°C/35°C, Outdoor Air Temperature 7°C DB/6°C WB;
- (b) ²Capacities and power inputs are based on the following conditions:
 Indoor Water Temperature 23°C/18°C, Outdoor Air Temperature 35°C DB/24°C WB.

Operation Range

| Mode | Heat Source Side Temperature (°C) | User Side Temperature (°C) |
|---------------|-----------------------------------|----------------------------|
| Heating | -20~35 | 25~55 |
| Cooling | 10~48 | 7~25 |
| Water Heating | -20~45 | 40~80 |

4. Installation Example


CASE 1: Connecting Under floor Coil and Fan Coil Unit

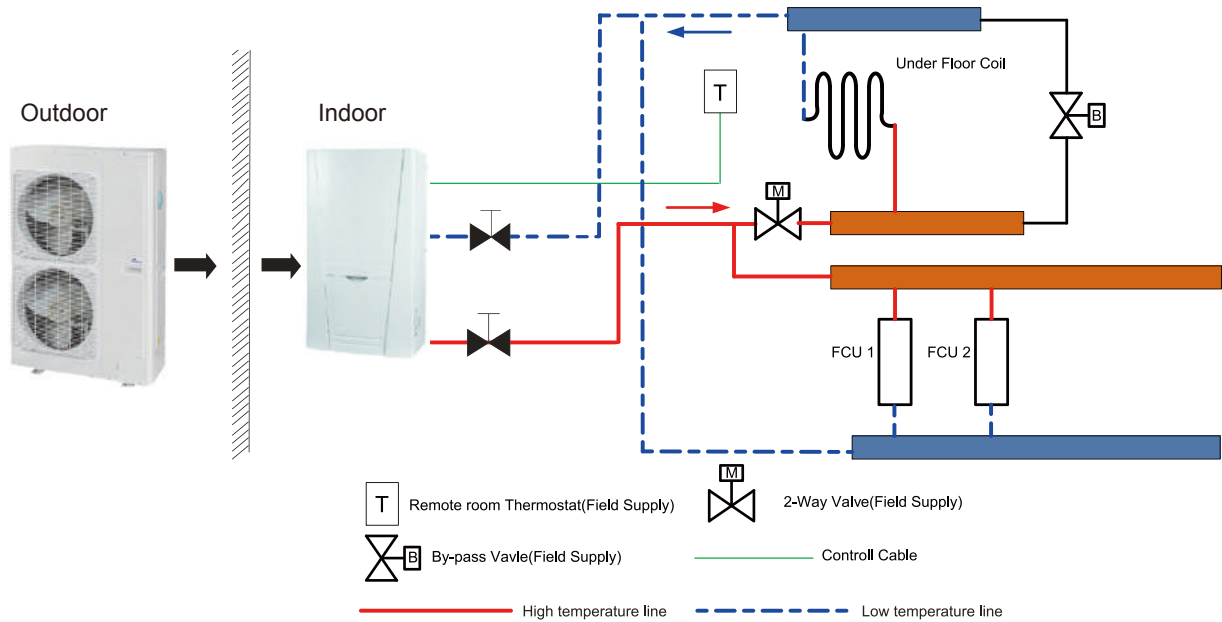

Notes

- The two-way valve is very important to prevent dew condensation on the floor and FCU while cooling mode;
- Type of thermostat and specification should be complied with installation of this manual;
- The bypass valve must be installed to secure enough water flow rate, and should be installed at the collector.
- When the FCU and the underfloor coil are used at the same time, performance of the underfloor coil is satisfied firstly. When performance of the FCU is required, then "Floor config" should be set to "Without".


CASE 2: Connecting Under floor Coil, Fan Coil Unit and Water Tank

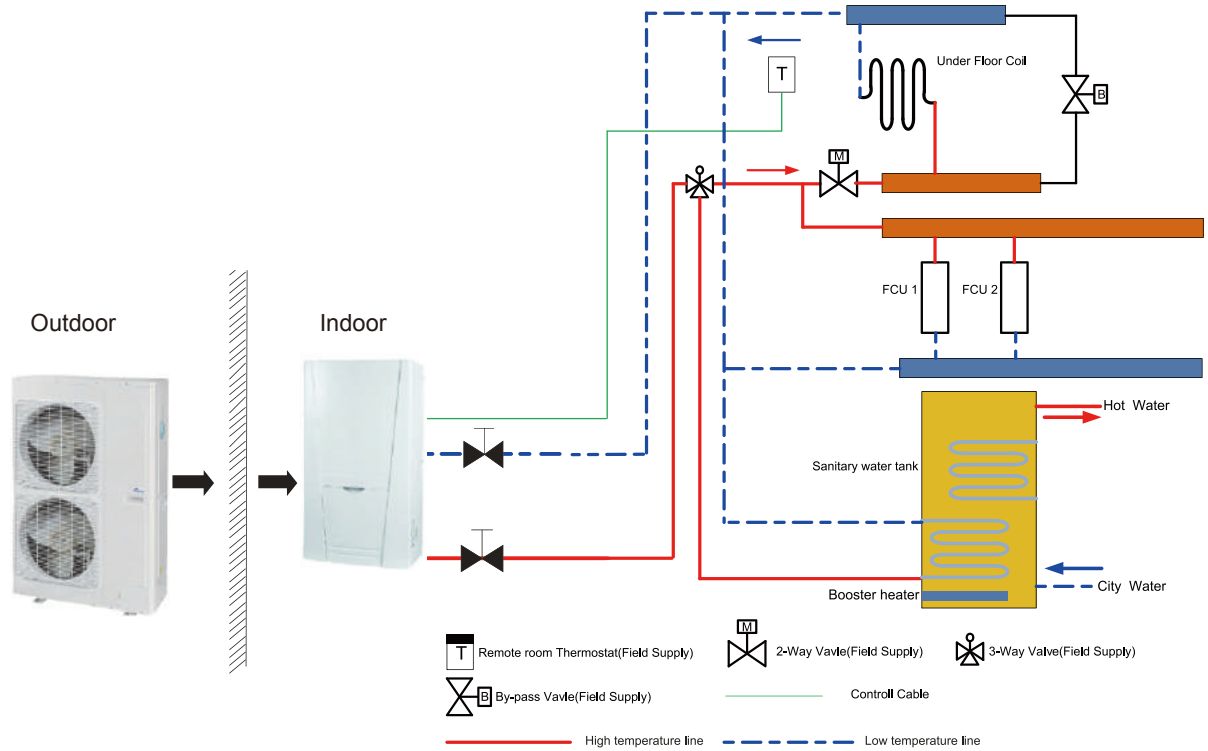

Notes

- (a) The two-way valve is very important to prevent dew condensation on the floor and FCU while cooling mode
- (b) In this case, three-way valve should be installed and should be complied with installation of this manual;
- (c) When the FCU and the underfloor coil are used at the same time, performance of the underfloor coil is satisfied firstly. When performance of the FCU is required, then “Floor config” should be set to “Without”.
- (d) Sanitary water tank should be equipped with internal electric heater to secure enough heat energy in the very cold days.

CASE 3 : Connecting Under floor Coil, Fan Coil Unit , Water Tank and Solar System

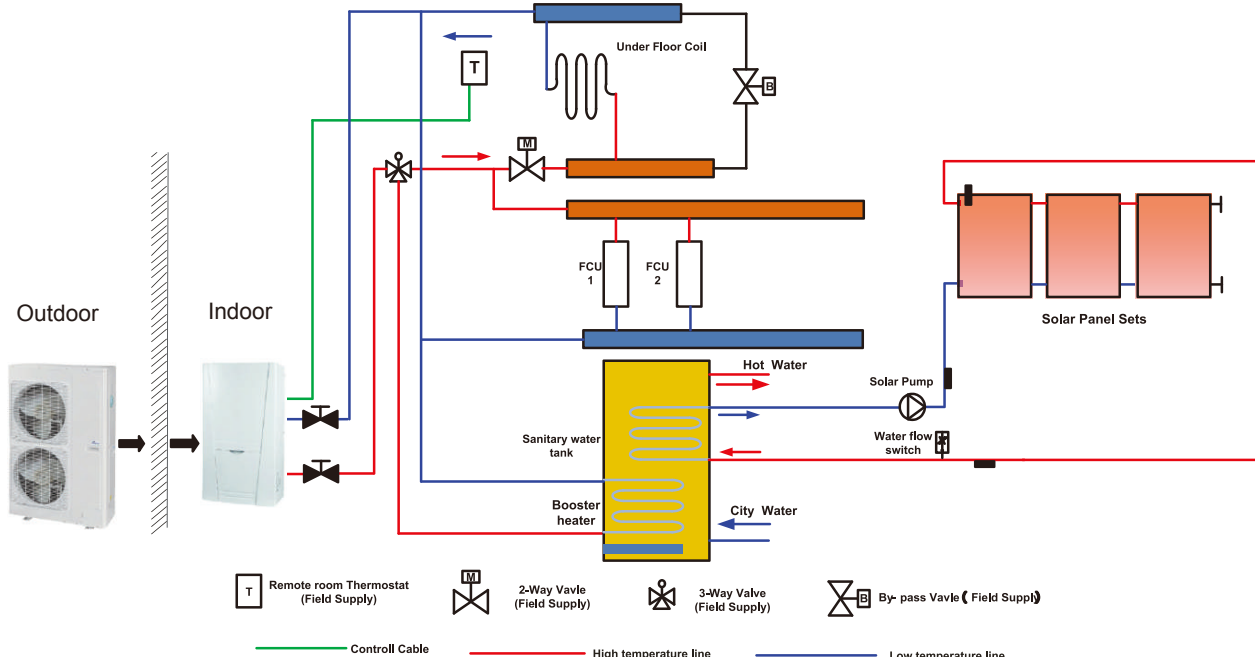

Notes

- (a) The two-way valve is very important to prevent dew condensation on the floor and FCU while cooling mode
- (b) In this case, three-way valve should be installed and should be complied with installation of this manual;
- (c) Sanitary water tank should be equipped with internal electric heater to secure enough heat energy in the very cold days.
- (d) When the FCU and the underfloor coil are used at the same time, performance of the underfloor coil is satisfied firstly. When performance of the FCU is required, then "Floor config" should be set to "Without".
- (e) For the solar heating system, only the control port is available and relative accessories are absent.


5. Main Components

5.1 Indoor unit

(1) ML-RS-CQ8.0Pd/NaE-K(I), ML-RS-CQ10Pd/NaE-K(I)



External

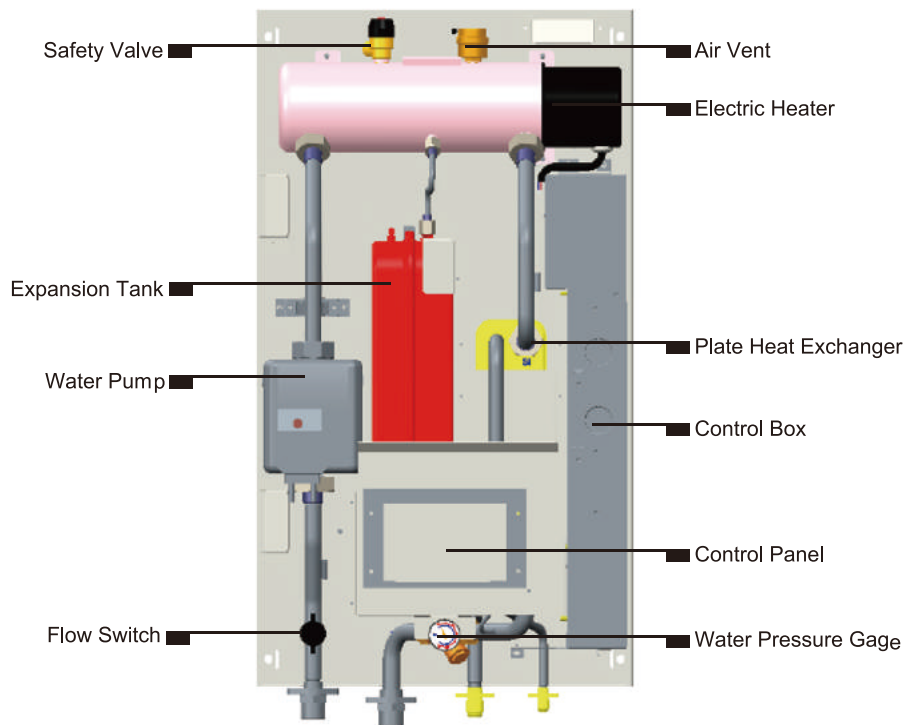


Internal

(2) T ŠĚRS-CQ12Pd/NaE-K(I), T ŠĚRS-CQ14Pd/NaE-K(I), T ŠĚRS-CQ16Pd/NaE-K(I), T ŠĚRS-CQ12Pd/NaE-M(I)
T ŠĚRS-CQ14Pd/NaE-M(I), T ŠĚRS-CQ16Pd/NaE-M(I)



External

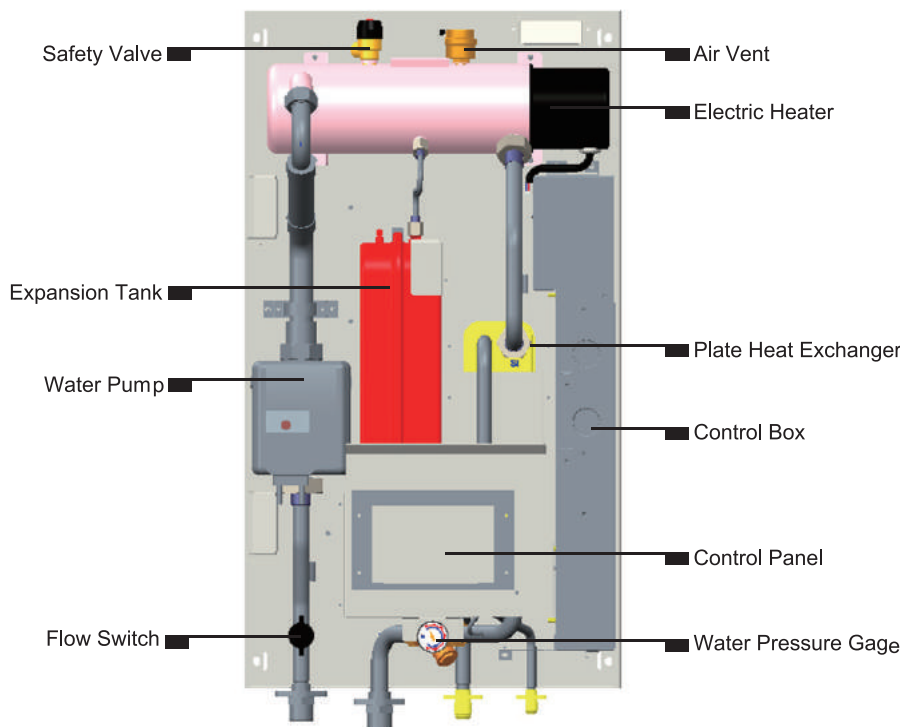


Internal

5.2 Outdoor unit

(1) T ŠĚRS-CQ8.0Pd/NaE-K(O), T ŠĚRS-CQ10Pd/NaE-K(O)



External

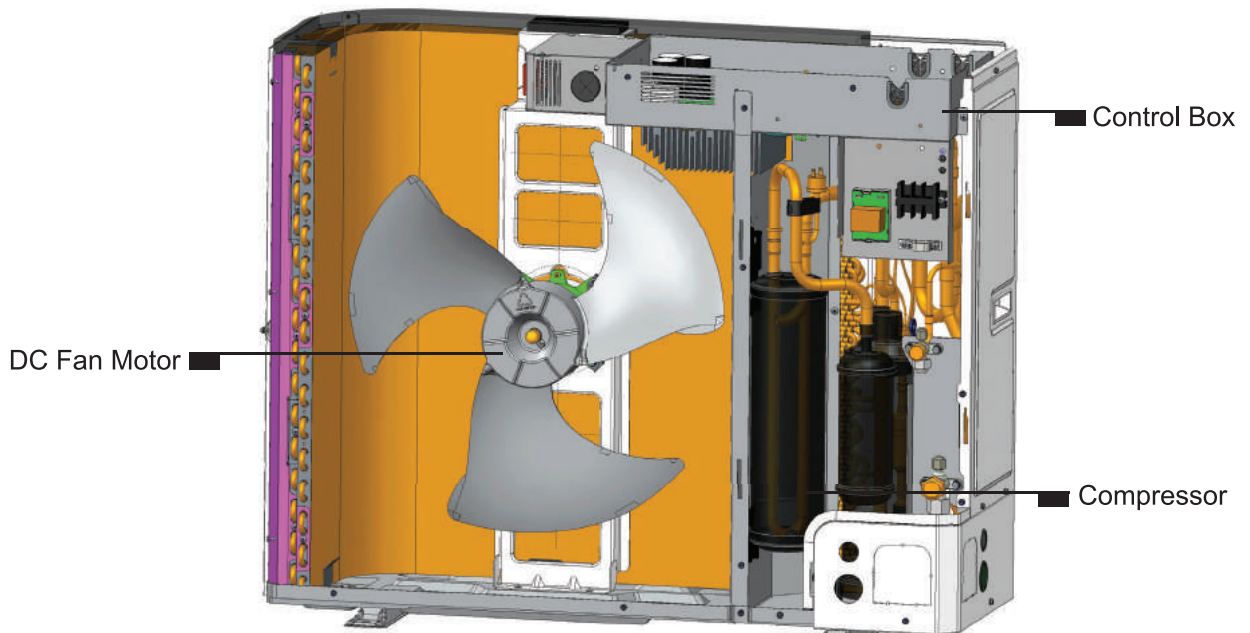

DC Fan Motor

Control Box


Compressor

Internal

(2) T ŠĚRS-CQ12Pd/NaE-K(O), T ŠĚRS-CQ14Pd/NaE-K(O), T ŠĚRS-CQ16Pd/NaE-K(O)



External

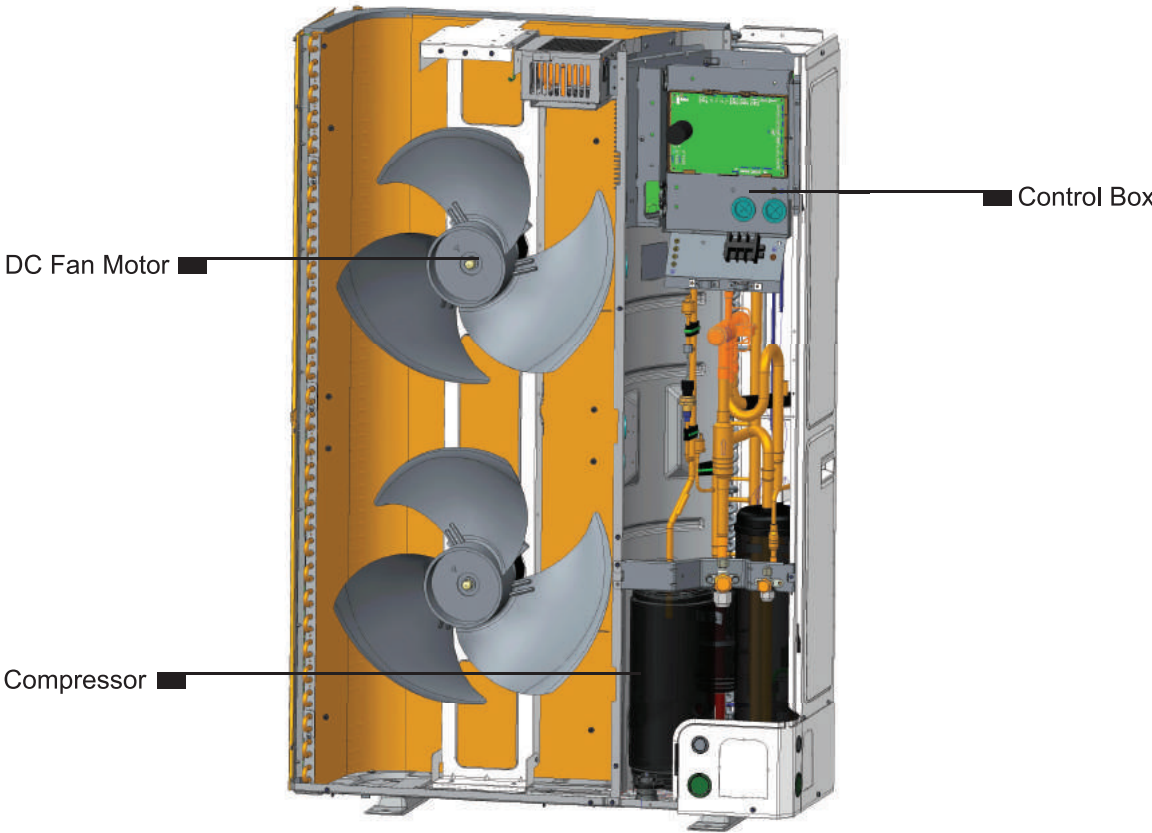


Internal

(3) T ŠĚRS-CQ12Pd/NaE-M(O), T ŠĚRS-CQ14Pd/NaE-M(O), T ŠĚRS-CQ16Pd/NaE-M(O)



External

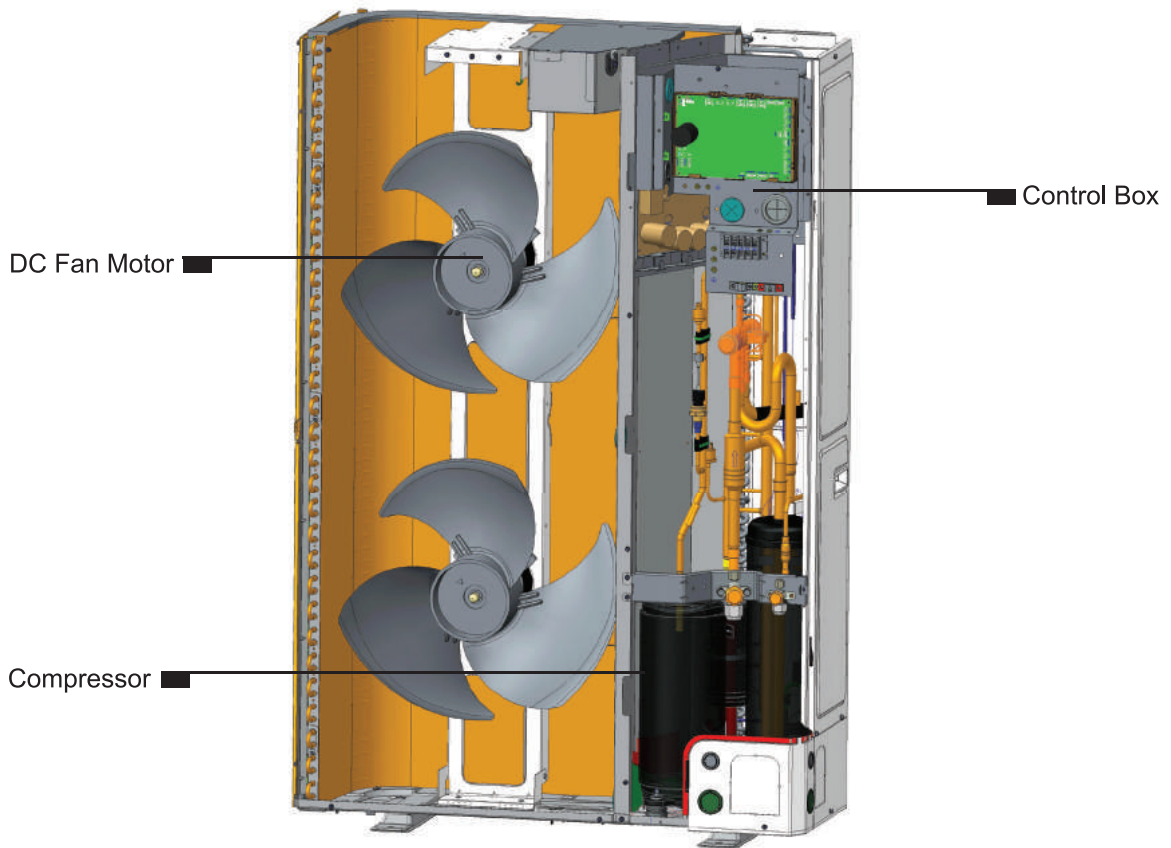

Internal

6. Installation Guideline of Outdoor Unit

6.1 Instruction to installation

- (1) Installation of the unit must be in accordance with national and local safety codes.
- (2) Installation quality will directly affect the normal use of the air conditioner unit. The user is prohibited from installation. Please contact your dealer after buying this machine. Professional installation workers will provide installation and test services according to installation manual.
- (3) Do not connect to power until all installation work is completed.


6.2 Installation of outdoor unit

6.2.1 Select installation location of outdoor unit

- (1) Outdoor unit must be installed on a firm and solid support.
- (2) Outdoor unit shall be installed close to the indoor unit, hence to minimize the length and bends of cooling pipe.
- (3) Avoid placing the outdoor unit under window or between two constructions, hence to prevent normal operating noise from entering the room.
- (4) Air flow at inlet and outlet shall not be blocked.
- (5) Install at a well-ventilated place, so that the machine can absorb and discharge sufficient air.
- (6) Do not install at a place where flammable or explosive goods exist or a place subject to severe dust, salty fog and polluted air.


6.2.2 Outline dimension of outdoor unit

- (1) ML-RS-CQ8.0Pd/NaE-K(O),ML-RS-CQ10Pd/NaE-K(O)

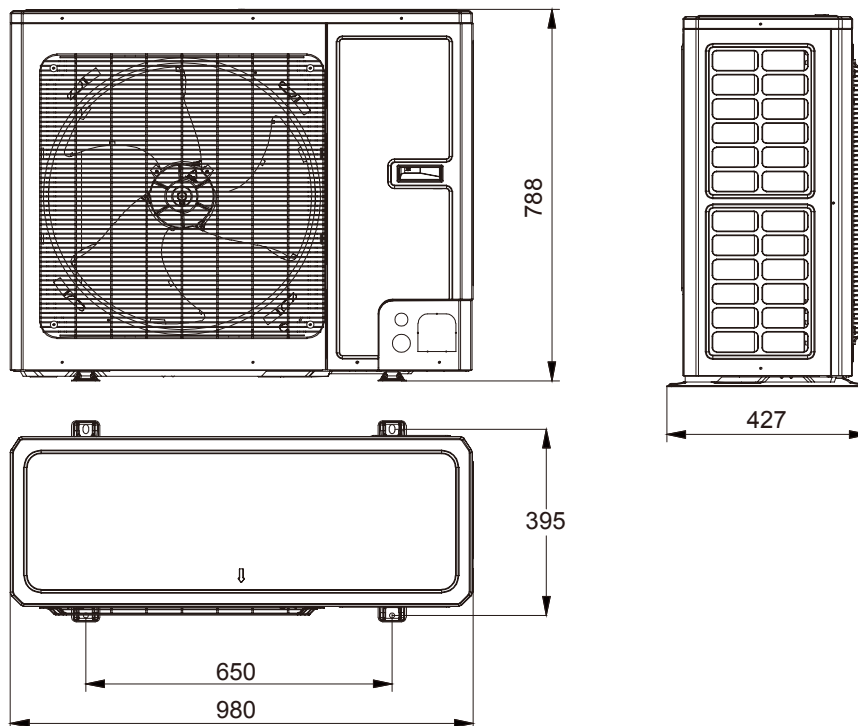

Air-to-water Heat Pump Split Unit

(2) ML-RS-CQ12Pd/NaE-K(O),ML-RS-CQ14Pd/NaE-K(O),ML-RS-CQ16Pd/NaE-K(O),
ML-RS-CQ12Pd/NaE-M(O),ML-RS-CQ14Pd/NaE-M(O),ML-RS-CQ16Pd/NaE-M(O)

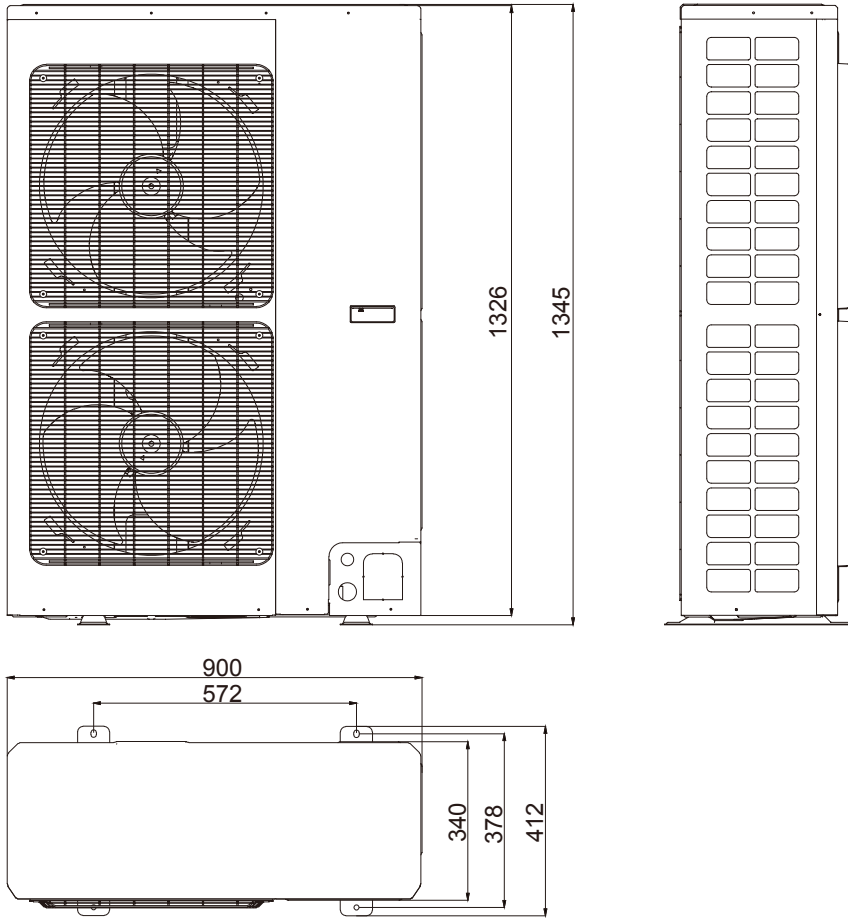


Description:

Unit: inch

| No. | Name | Remarks |
|-----|---------------------------|--|
| 1 | Liquid-side Service Valve | 3/8" WT ŠRS-CQ8.0/10Pd/NaE-K, T ŠRS-CQ12/14/16 Pd/NaE-K, T ŠRS-CQ12/14/16 Pd/NaE-M |
| 2 | Gas-side Service Valve | 5/8" WT ŠRS-CQ8.0/10Pd/NaE-K, T ŠRS-CQ12/14/16 Pd/NaE-K, T ŠRS-CQ12/14/16 Pd/NaE-M |
| 3 | Handle | Used to cover or uncover the front casew |
| 4 | Air discharge Grill | / |

6.2.3 Space requirements for installation

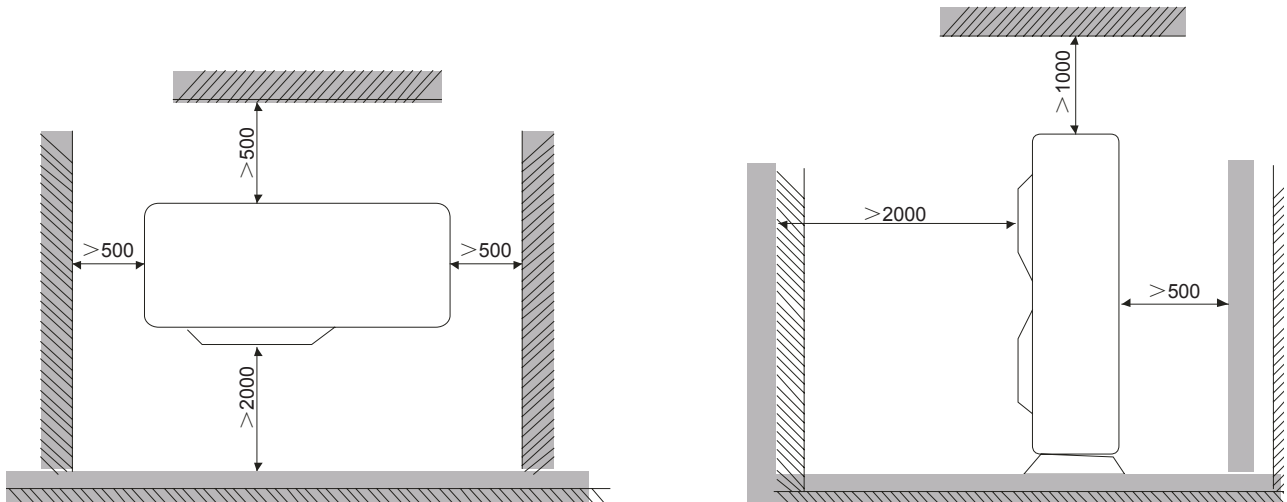

6.2.4 Precautions on installation of outdoor unit

- (1) When moving outdoor unit, it is necessary to adopt 2 pieces of long enough rope to hand the unit from 4 directions. Included angle between the rope when hanging and moving must be 40° below to prevent center of the unit from moving.
- (2) Adopt M12 bolts components to tighten feet and under frame when installing.
- (3) Outdoor unit should be installed on concrete base that is 10cm height.
- (4) Requirements on installation space dimension of unit's bodies are shown in following drawing.
- (5) Outdoor unit must be lifted by using designated lifting hole. Take care to protect the unit during lift. To avoid rusting, do not knock the metal parts.


7. Installation of Indoor Unit

7.1 Select installation location of indoor unit


- (1) Avoid direct sunshine.
- (2) Ensure the hanger rod, ceiling and building structure have sufficient strength to support the weight of air conditioner unit.
- (3) Drainage pipe is easy to connect out.
- (4) Indoor and outdoor connection pipes are easy to go outdoors.
- (5) Do not install at a place where inflammable or explosive goods exist or inflammable or explosive gas might leak.
- (6) Do not install at a place subject to corrosive gas, severe dust, salty fog, smoke or heavy moisture.

7.2 Install process of indoor unit


Step1:Drilling hole on the wall in the following draw.

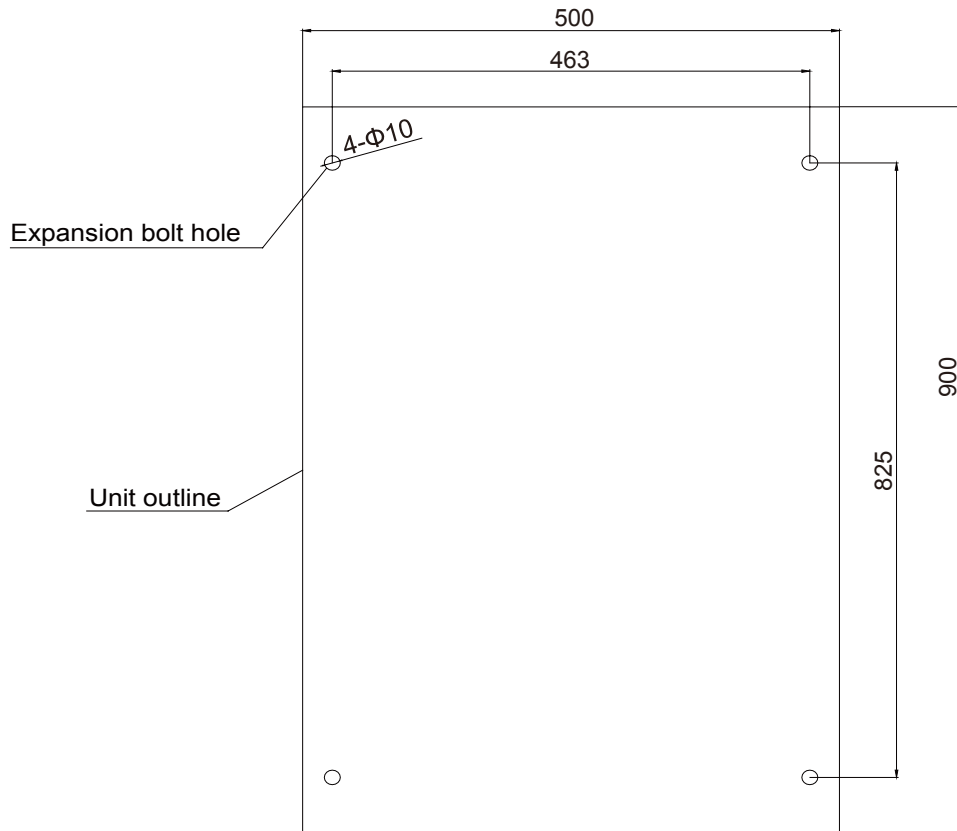

Step2:Releasing screws, detach front cover from the indoor unit.

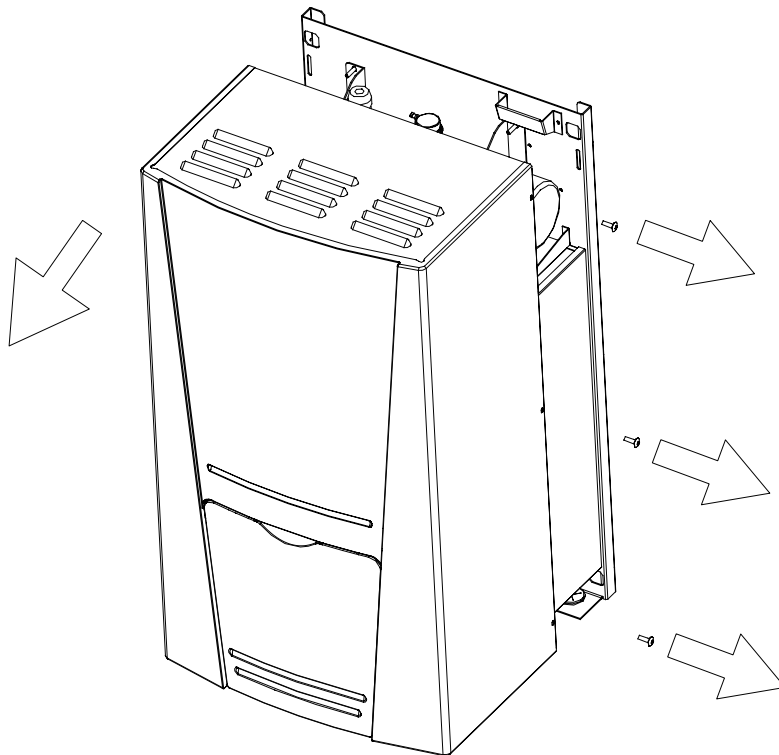


Step3: Attaching indoor unit to the wall make use of accessory expansion bolt.

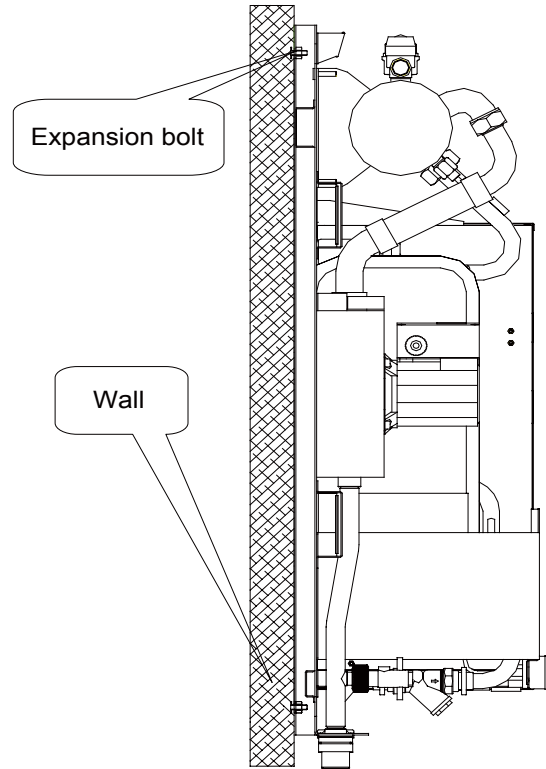

 NOTE

- While lifting the indoor unit, at least two persons should be joined. Weight of the indoor unit is more than 50kg.
- The indoor unit must be installed vertically to the ground and fastened securely.
- Before commissioning, the dust-proof cap of the automatic relief valve must be loosened, other than entirely being removed away, and it can be tightened in case that it leaks.

7.3 Outline dimension of indoor unit

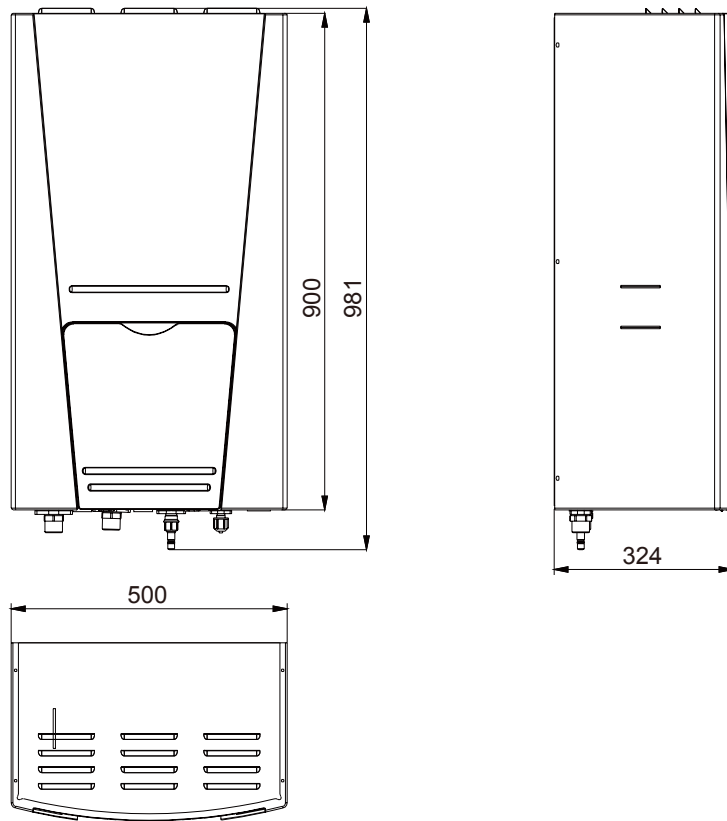


Description:

Unit: inch

| No. | Name | Remarks | |
|-----|----------------------|------------|--|
| 1 | Leaving Water Pipe | 1"Male BSP | |
| 2 | Returning Water Pipe | 1"Male BSP | |
| 3 | Gas-side Pipe | 5/8 | ML-RS-CQ8.0/10Pd/NaE-K, ML-RS-CQ12/14/16Pd/NaE-K, ML-RS-CQ12/14/16Pd/NaE-M |
| 4 | Liquid-side Pipe | 3/8 | ML-RS-CQ8.0/10Pd/NaE-K, ML-RS-CQ12/14/16Pd/NaE-K, ML-RS-CQ12/14/16Pd/NaE-M |


7.4 Space requirements for installation

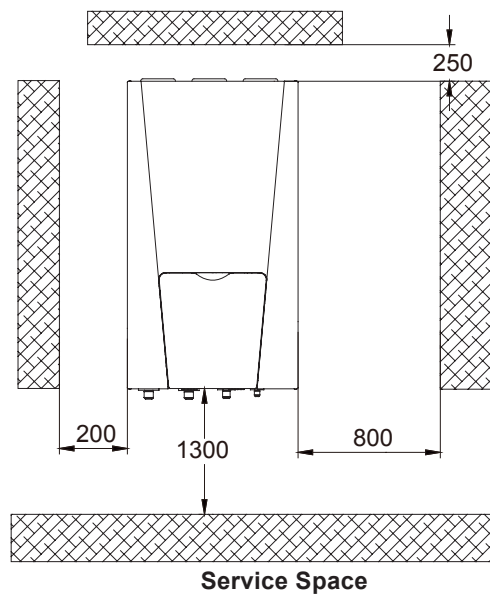

7.5 Precautions on installation of indoor unit

- (1) Indoor unit shall be vertically mounted on the wall of the room with expansion bolt.
- (2) Keep the indoor unit away from heat sources like heat sink and so on in the room as much as possible.
- (3) Keep the indoor unit as close as possible to outdoor unit. Level distance between connection pipes cannot exceed 30m (8.0~16kW) and vertical distance cannot exceed 15m (8.0~16kW).


7.6 Water volume and pump capacity (with pump)

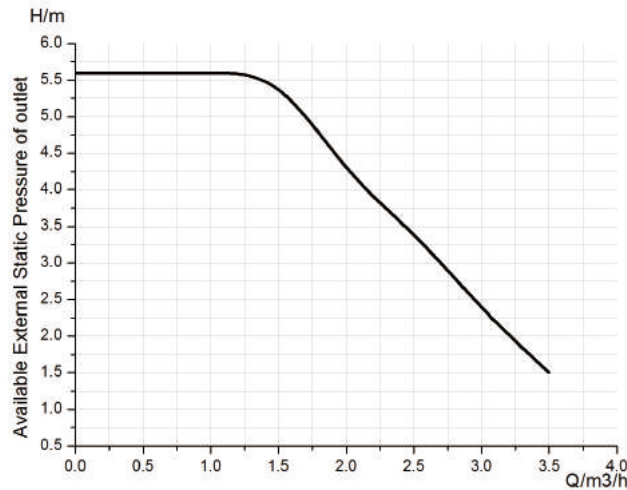

Note

During operation, the water pump will adjust its output based on the actual load.

7.7 Water volume and expansion vessel pressure

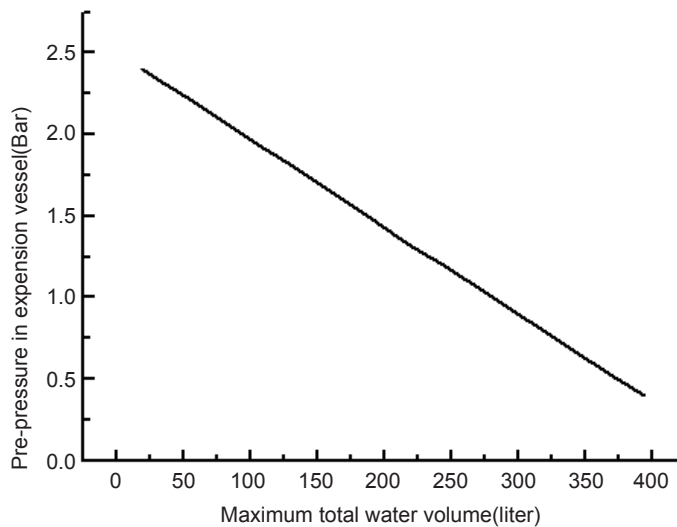

Notes

- (a) The expansion vessel is 10 liter and 1bar pre-pressurized;
- (b) Total water volume of 280 liter is default; if total water is changed because of installation condition, the pre-pressure should be adjusted to secure proper operation. If the indoor unit is located at the highest position, adjustment is not required;
- (c) Minimum total water volume is 20 liter;
- (d) To adjust pre-pressure, use nitrogen gas by certificated installer.

7.8 Selection of expansion vessel

Formula:

$$v = \frac{c \cdot e}{1 - \frac{1 + p_1}{1 + p_2}}$$

V--- Volume of expansion vessel

C--- Total water volume

P₁--- Pre-set pressure of expansion vessel

P₂-- The highest pressure during running of the system (that is the action pressure of safety valve.)


e---The expansion factor of water (the difference between the expansion factor of the original water temperature and that of highest water temperature.)

| Water expansion factor in different temperature | |
|---|--------------------|
| Temperature(°C) | Expansion factor e |
| 0 | 0.00013 |
| 4 | 0 |
| 10 | 0.00027 |
| 20 | 0.00177 |
| 30 | 0.00435 |
| 40 | 0.00782 |
| 45 | 0.0099 |
| 50 | 0.0121 |
| 55 | 0.0145 |
| 60 | 0.0171 |
| 65 | 0.0198 |
| 70 | 0.0227 |
| 75 | 0.0258 |
| 80 | 0.029 |
| 85 | 0.0324 |
| 90 | 0.0359 |
| 95 | 0.0396 |
| 100 | 0.0434 |

8. Connection of Pipeline


8.1 Connection of outlet pipe for indoor & outdoor unit


- (1) Align the expansion end of copper pipe with the center of threaded joint. Tighten the flaring nuts with your hands.
- (2) Tighten the flaring nuts with torque wrench until you hear a “click”.
- (3) Bend of fitting pipe shall not be too low; otherwise the fitting pipe might crack. Please use pipe bender when bending the fitting pipe.
- (4) When connecting outdoor and indoor unit, never pull the big and small joint of indoor unit with force, so as to prevent the tubes of indoor unit from cracking and causing leakage.
- (5) Connecting pipe shall be supported by a rack without transmitting its weight to other units.

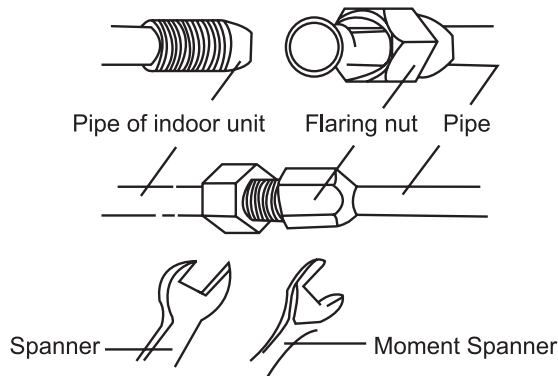

8.2 Installation of protective layer on connection pipe

- (1) To avoid condensate dew or water leakage on connecting pipe, the air pipe and liquid pipe must be wrapped with heat preservation material and adhesive pipe for insulation from the air.
- (2) The joints on indoor unit and outdoor unit must be wrapped with heat preservation materials and have no clearance against the wall surface of indoor unit and outdoor unit.
- (3) Wrap the pipe with tapes.
 - Use the adhesive tape to wrap the connecting pipe and cable into one bundle. To prevent condensate water from overflowing out of the drainpipe, the drainpipe shall be separated from connecting pipe and cable.
 - Wrap the heat preservation tape so that each ring of tape shall press half of the previous ring.
 - Fix the wrapped pipe onto the wall with pipe clamp.
 - Do not wrap the protective tape too tightly, as this will decrease the heat insulation performance.
 - After completing the protection work and wrapping the pipe properly, close the wall holes with sealing materials.

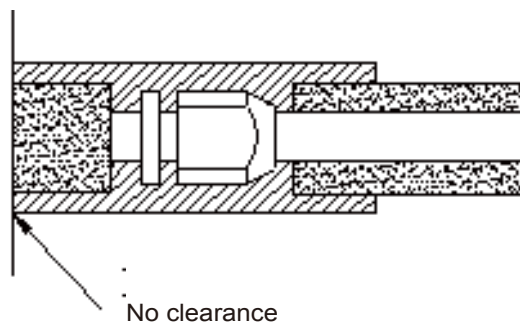

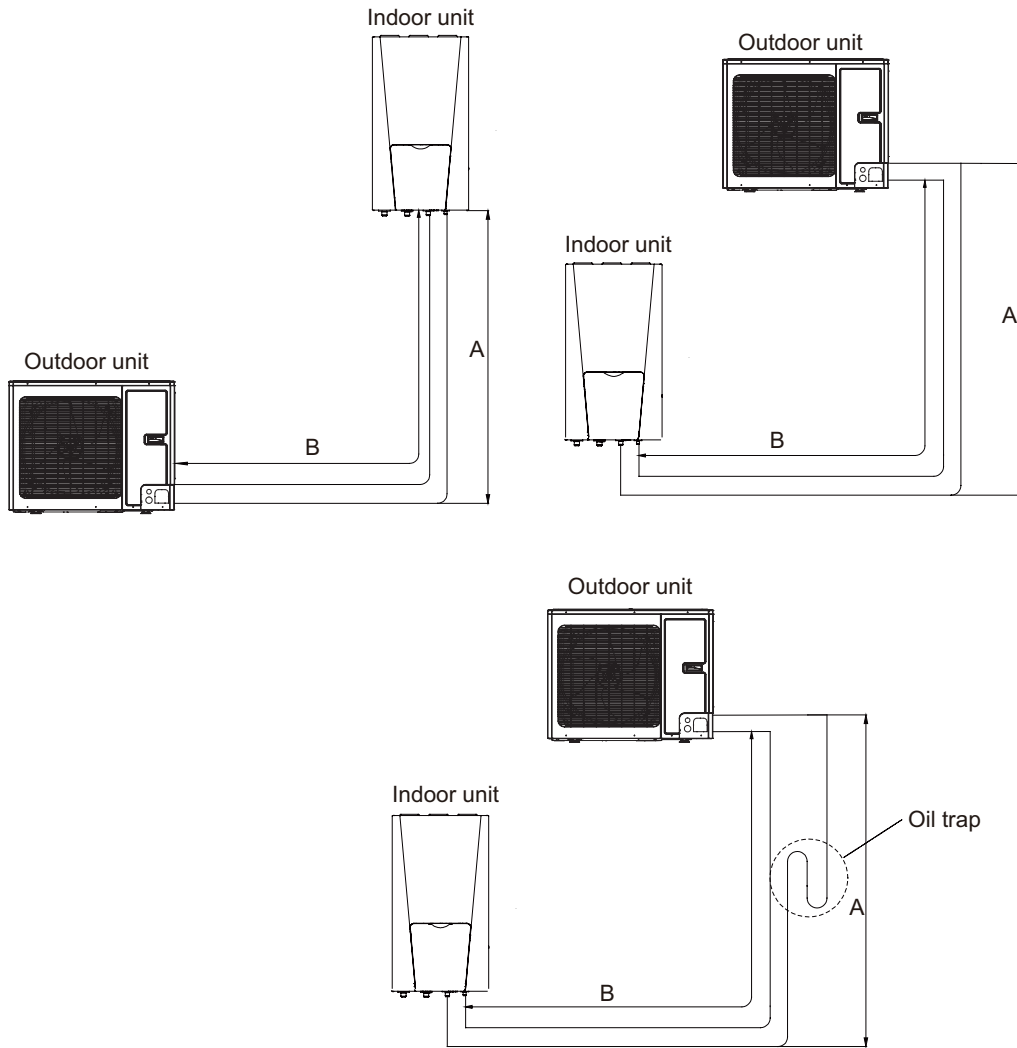

| Model | Pipe size (Diameter:Φ) | | Length B | | Elevation A | | Additional refrigerant |
|---------------------|---------------------------|--------|----------|------|-------------|------|---------------------------|
| | gas | Liquid | Standard | Max. | Standard | Max. | |
| ML-RS-CQ8.0Pd/NaE-K | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |
| ML-RS-CQ10Pd/NaE-K | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |
| ML-RS-CQ12Pd/NaE-K | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |
| ML-RS-CQ14Pd/NaE-K | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |
| ML-RS-CQ16Pd/NaE-K | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |
| ML-RS-CQ12Pd/NaE-M | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |
| ML-RS-CQ14Pd/NaE-M | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |
| ML-RS-CQ16Pd/NaE-M | 5/8" | 3/8" | 5m | 30m | 0m | 15m | 50g/m |

Notes

- (a) No additional charge of the refrigerant is need when the pipe length is less than 10m, if the pipe length is longer than 10m, additional charge of the refrigerant is needed according to the table.
- (b) Example: If 14kW model is installed at a distance of 25m, $(25-10) \times 50 = 750\text{g}$ refrigerant should be added. Rated capacity is based on standard pipe length and maximum allowable length is based on the product reliability in the operation. Oil trap should be installed every 5-7 meters when the location of outdoor unit is higher than indoor unit.


9. Remote Air Temperature Sensor



Front side



Back side

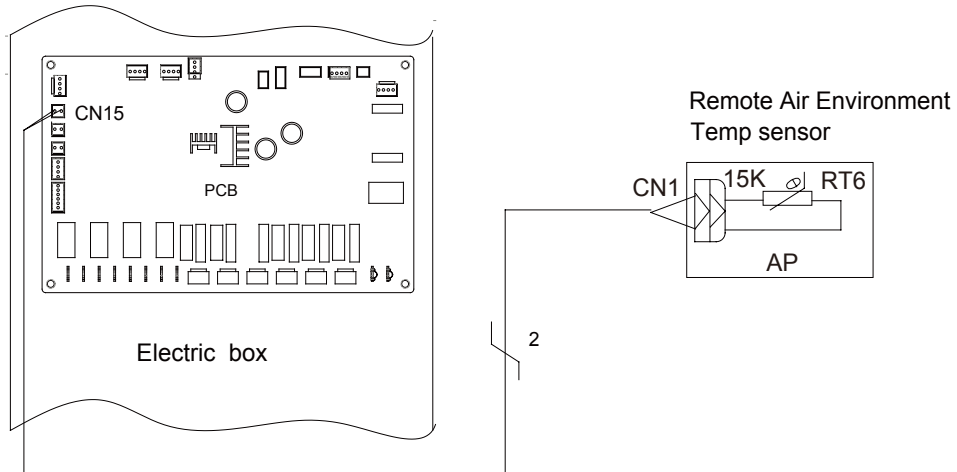


Notes

- (a) Distance between the indoor unit and the remote air temperature sensor should be less than 15m due to length of the connection cable of remote air temperature sensor;
- (b) Height from floor is approximately 1.5m;
- (c) Remote air temperature sensor cannot be located where the area may be hidden when door is open;
- (d) Remote air temperature sensor cannot be located where external thermal influence may be applied;
- (e) Remote air temperature sensor should be installed where space heating is mainly applied;
- (f) After the remote air temperature sensor is installed, it should be set to "With" through the wired controller so as to set the remote air temperature to the control point.

10. Thermostat


Installation of the thermostat is very similar to that of the remote air temperature sensor.

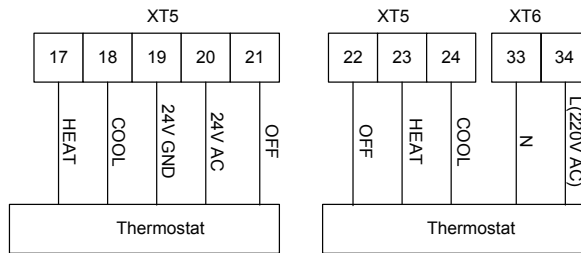

How to Wire Thermostat

- (1) Uncover the front cover of indoor unit and open the control box;
- (2) Identify the power specification of the thermostat, if it is 230V, find terminal block XT5 as NO.22~24 and block XT6 as NO.33~34; Otherwise, if it is 24V, find terminal block XT5 as NO.17~21;
- (3) If it is the heating/cooling thermostat, please connect wire as per the figure above.

Installation Examples

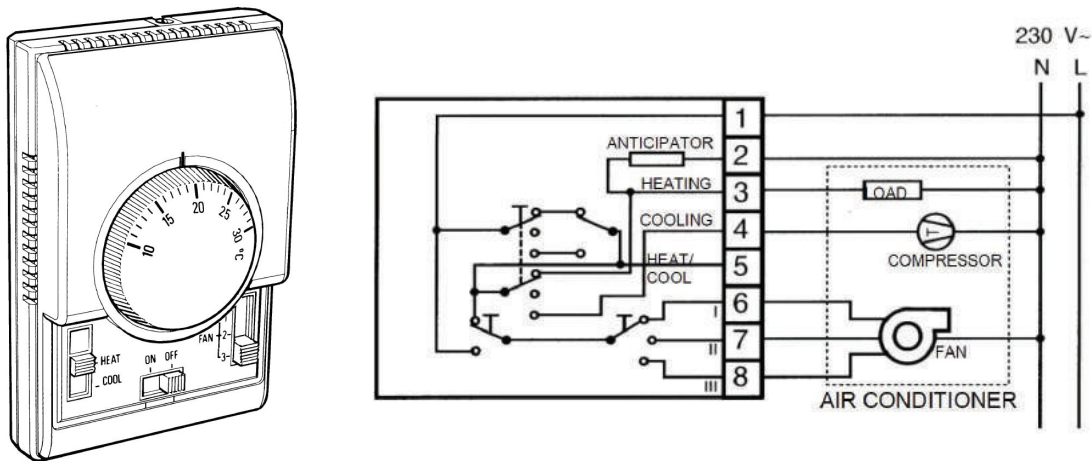

| | | | |
|--------------------------|---|--|---|
| Setpoint range | 10~30 °C , By means of a large setpoint dial | Mounting | Directly onto the wall or wall-box (mounting screws supplied) |
| Supply voltage | 230V, 50/60Hz | Wiring | Up to 9 screw-in terminals per unit, capable of accepting wires up to 1.5mm ² . |
| Thermostat switch | S.P. D.T. | Enclosure | Plastic 2-piece housing |
| Performance | Typical differential 1 °C (heating & cooling) at 20 at 50% load with anticipator connected | Dimensions Protection class | 85*130*40mm(W*H*D) IP30 |
| Electric ratings | 4(2)A, 230V, Typical loads are fans, zone valves, relays, compressors. Compressors of greater than 0.5kW capacity should be switched via a contactor. | Environmental requirements | Operating temperature range 0 to 40 °C . S |
| Operational life | Greater than 100000 cycles (all loads) for thermostat contacts at 230V; greater than 6000 operations for all manually operated switches | Approvals | The XE70 range is CE, RoHs and WEEE compliant. For regulatory information, DoC/CoC D0045 is available on request. Product must be wired as shown for CE compliance. |

NOTE

- Never use 230V AC and 24V AC thermostat at the same time, otherwise, it will cause short circuit and power cut-off by the circuit breaker;
- Setting temperature by the thermostat(heating or cooling) should be within the temperature range of the product;
- For other constrains, please refer to previous pages about the remote air temperature sensor;
- Do not connect external electric loads. Wire 230V AC(24V AC) and 230V GND(24V GND) should be used only for the electric thermostat;
- Never connect external electric loads such as valves, fan coil units, etc. If connected, the mainboard of the unit can be seriously damaged;
- Installation of the thermostat is very similar to that of the remote air temperature sensor.
- "OFF" interfaces can be kept vacant and no adverse effect will be produced for nomrla operation. When signals for both heating and cooling are not detected, it can be considered the thermostat is "OFF".

11. 2-Way Valve

The 2-way valve 1 is required to control water flow for cooling or heating operation. The role of 2-way valve 1 is to cut off water flow into the underfloor loop when the fan coil unit is equipped for cooling operation.

General Information

| Type | Power | Operating Mode | Supported |
|-----------|---------------|--------------------|-----------|
| NO 2-wire | 230V 50Hz ~AC | Closing water flow | Yes |
| | | Opening water flow | Yes |
| NC 2-wire | 230V 50Hz ~AC | Closing water flow | Yes |
| | | Opening water flow | Yes |


- (1) Normal Open type. When electric power is NOT supplied, the valve is open. (When electric power is supplied, the valve is closed.)
- (2) Normal Closed type. When electric power is NOT supplied, the valve is closed. (When electric power is supplied, the valve is open.)

How to Wire 2-Way Valve:

Follow steps below to wire the 2-way valve.

Step 1. Uncover the front cover of the unit and open the control box.

Step 2. Find the terminal block and connect wires as below.

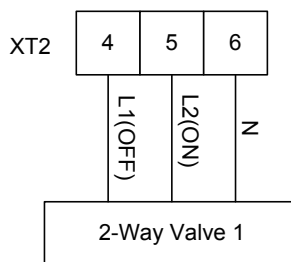

WARNING

- Normal Open type should be connected to wire (ON) and wire (N) for valve closing in cooling mode.
- Normal Closed type should be connected to wire (OFF) and wire (N) for valve closing in cooling mode.
- (ON) : Line signal (for Normal Open type) from PCB to 2-way valve
- (OFF) : Line signal (for Normal Closed type) from PCB to 2-way valve
- (N) : Neutral signal from PCB to 2-way valve

12. 3-Way Valve

The 3-way valve 2 is required for the sanitary water tank. Its role is flow switching between the under floor heating loop and the water tank heating loop.

General Information

| Type | Power | Operating Mode | Supported |
|----------------|---------------|--|-----------|
| SPDT 3-wire | 230V 50Hz ~AC | Selecting "Flow A" between "Flow A" and "Flow B" | Yes |
| | | Selecting "Flow B" between "Flow B" and "Flow A" | Yes |


- (1) SPDT = Single Pole Double Throw. Three wires consist of Live1 (for selecting Flow B), and Neutral (for common).
- (2) Flow A means 'water flow from the indoor unit to under floor water circuit'.
- (3) Flow B means 'water flow from the indoor unit to sanitary water tank'.

Follow steps below to wire the 3-way valve:

Follow below procedures Step 1 ~ Step 2.

Step 1. Uncover front cover of the unit and open the control box.

Step 2. Find terminal block and connect wires as below.

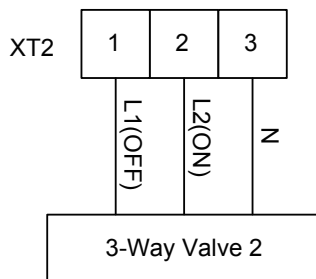


WARNING

- The 3-way valve should select water tank loop when electric power is supplied to wire (OFF) and wire (N).
- The 3-way valve should select under floor loop when electric power is supplied to wire (ON) and wire (N).
- (ON): Line signal (Water tank heating) from the main board to the 3-way valve
- (OFF): Line signal (Under floor heating) from the main board to the 3-way valve
- (N): Neutral signal from the main board to the 3-way valve

13. Other Auxiliary Heat Sources


Other auxiliary heat sources are allowed for the equipment and controlled in such a way that the mainboard will output 230V when outdoor temperature is lower than the set point for startup of the auxiliary heat source.

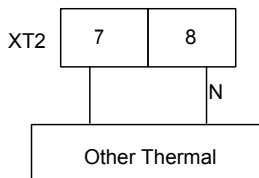


14. Gate-controller

If there is gate control function, installation guide follow as:

- (1) T ŠĚRS-CQ8.0Pd/NaE-K, T ŠĚRS-CQ10Pd/NaE-K, T ŠĚRS-CQ12Pd/NaE-K, T ŠĚRS-CQ14Pd/NaE-K, T ŠĚRS-CQ16Pd/NaE-K

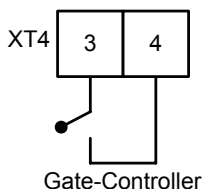


(2) T ŠĚRS-CQ12Pd/NaE-M, T ŠĚRS-CQ14Pd/NaE-M, T ŠĚRS-CQ16Pd/NaE-M

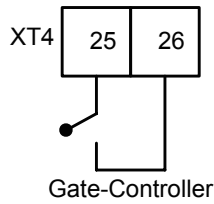


15. Charging and Discharging of Refrigerant

- (1) Before shipped out from manufacturer, the outdoor unit has been filled with refrigerant. Additional refrigerant may be filled when carrying out site connection of pipelines.
- (2) Check the liquid valve and the gas valve of the outdoor unit. The valves shall be completely shut off.
- (3) Connect a vacuum pump to the liquid valve and the gas valve of the outdoor unit to remove air from the inside of the indoor unit and the connecting pipe. Refer to the following figure:

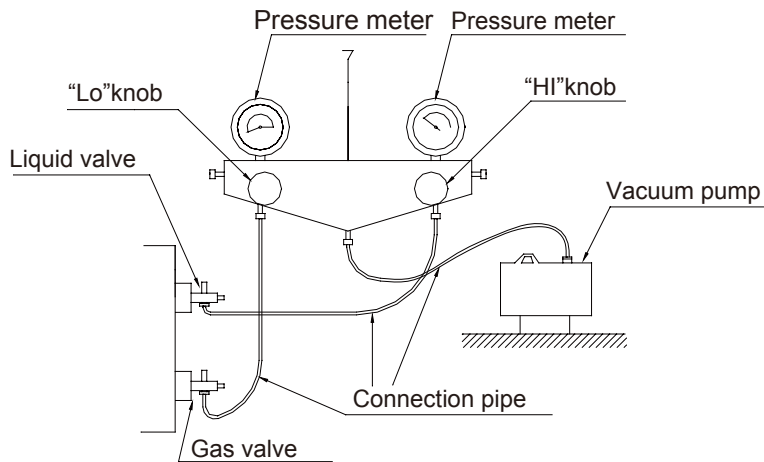

- (4) After confirming that there is no leakage from the system, when the compressor is not in operation, charge additional R410A working fluid with specified amount to the unit through the filling opening of the liquid pipe valve of the outdoor unit.
 - Be sure to charge the specified amount of refrigerant in liquid state to the liquid pipe. Since this refrigerant is a mixed refrigerant, adding it in gas form may cause the refrigerant composition to change, preventing normal operation.
 - Before charging, check whether the refrigerant cylinder is equipped with a siphon tube or not.

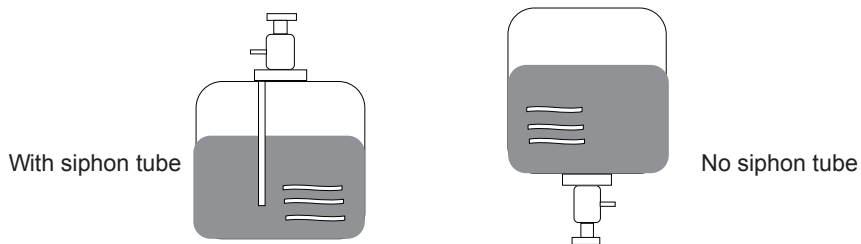

⚠ WARNING

- When charging is interrupted or finished, reinspect the unit but do not let the compressor run into operation.

⚠ NOTE

- Do not use mixture of refrigerant vapor and air or oxygen for pressurizing for fear of explosion.

16. Refrigerant Collecting


When relocating or disposing of the indoor/outdoor unit, pump down the system following the procedure below so that no refrigerant is released into the atmosphere.

- (1) Turn off the power supply (circuit breaker).
- (2) Connect the low-pressure valve on the gauge manifold to the charge plug (lowpressure side) on the outdoor unit.
- (3) Close the liquid stop valve completely.
- (4) Supply power (circuit breaker).


Start-up of the indoor-outdoor communication takes about 3 minutes after the power (circuit breaker) is turned on. Start the pump-down operation 3 to 4 minutes after the power (circuit breaker) is turned on.

- (5) Perform the refrigerant collecting operation (pump down mode).

Hold pressing UP key 5 seconds at the homepage to enter pump down mode.

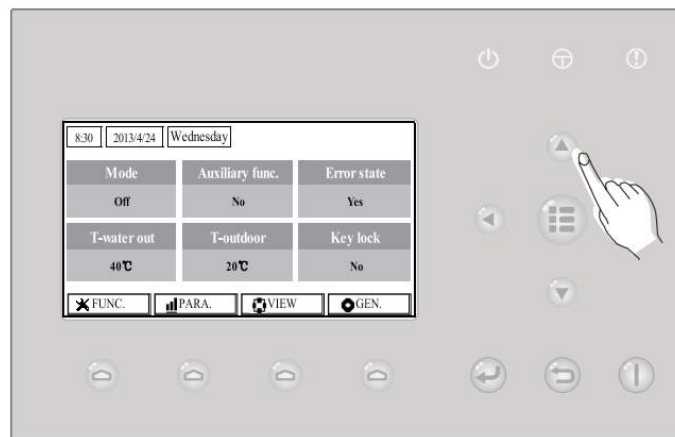

- (6) Fully close the ball valve on the gas pipe side of the outdoor unit when the pressure gauge on the gauge manifold shows 0.05 to 0 MPa [Gauge] (approx. 0.5 to 0 kgf/cm²) and quickly stop the air conditioner. Then press UP key or Down key or ON/OFF key can exit pump down mode.

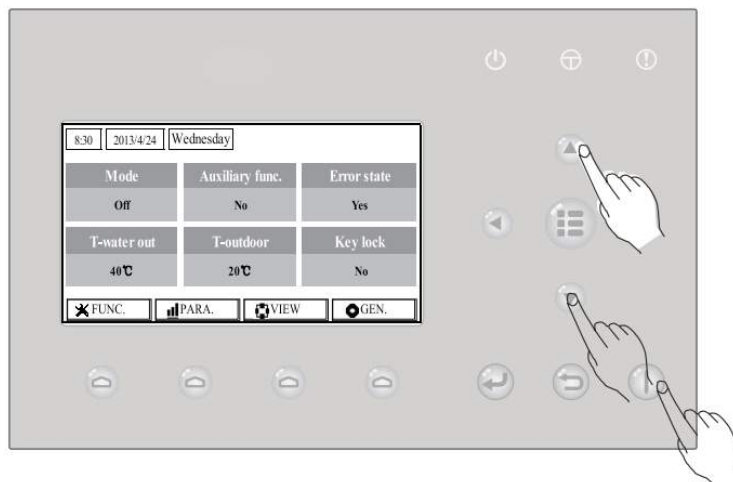

- (7) Turn off the power supply (circuit breaker), remove the gauge manifold, and then disconnect the refrigerant pipes.

WARNING

- When pumping down the refrigerant, stop the compressor before disconnecting the refrigerant pipes.
- If the refrigerant pipes are disconnected while the compressor is operating and the stop valve (ball valve) is open, the pressure in the refrigeration cycle could become extremely high if air is drawn in, causing the pipes to burst, personal injury, etc.

17. Handling of the Unit

During installing or moving the unit, other substances except refrigerant cannot get into the refrigerant pipe and there shall not be air remained in the pipe.

If air or other substance gets into the pipe, system pressure will increase and compressor will be damaged.

Do not charge refrigerant of other type into the unit during installing or moving. Otherwise, it may cause poor operation, malfunction, mechanical failure, or even serious safety accident.

If the refrigerant shall be recycled during moving or maintaining, pressure meter must be used. Set the unit in cooling mode and close the valve at high pressure side (liquid valve) completely. When the reading of pressure meter ranges 0~0.05MPa (about 30s~40s), close the valve at high pressure side (gas valve) completely, turn off the unit and cut off power supply.

If refrigerant recycle time is too long, air may get into the system. In this case, system pressure will increase and compressor will be damaged.

During recycling refrigerant, make sure the liquid valve and gas valve are closed completely, and the power supply is cut off before disassembling the connection pipe.

If connection pipe is disassembled when the compressor is still operating, air may get into the system. In this case, system pressure will increase and compressor will be damaged.

During installing the unit, make sure the connection pipe is connected properly before starting the compressor.

If the compressor is started before finishing connection of connection and when the cut-off valve is opened, air may get into the system. In this case, system pressure will increase and compressor will be damaged.

The indoor unit and outdoor unit shall be connected properly with required wire. The wiring terminal shall be secured properly without affecting by exterior force directly.

If the wire is not connected properly or the wiring terminal is not secured properly, fire hazard may be caused.

The wire cannot be refit or reconnected in the middle.


When the length of connection wire is not sufficient, please contact the appointed after-sales service center to purchase a specialized wire with sufficient length.

18. Installation of Insulated Water Tank

18.1 Installation measure

The insulated water tank should be installed and keep levelly within 5m and vertically within 3m from the indoor unit. It can be installed in the room.


Standing water tank must be installed vertically with the bottom on the ground, never suspended. Installation place must be firm enough and the water tank should be fixed on the wall with bolts to avoid vibration, as shown in the following figure. Weight capacity of water tank during installation should also be considered.

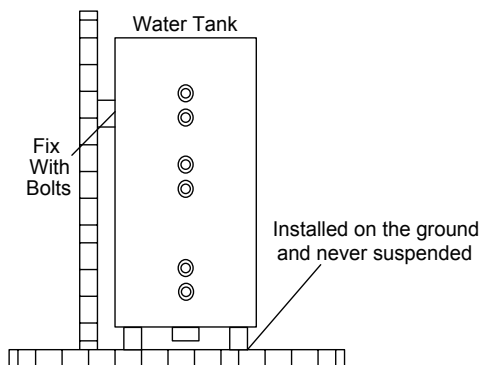

The minimum clearance from the water tank to combustible surface must be 500mm.

There should be water pipe, hot water joint and floor drain near the water tank in favor of water replenishment, hot water supply and drainage of water tank.


Connection of inlet/outlet waterway: Connect the safety check valve attached with the unit (with the arrow on it pointing at the water tank) with the water inlet of water tank with PPR pipe according to the following figure, sealing with unsintered tape. The other end of the safety check valve should connect with tap water joint. Connect the hot water pipe and water outlet of water tank with PPR pipe.

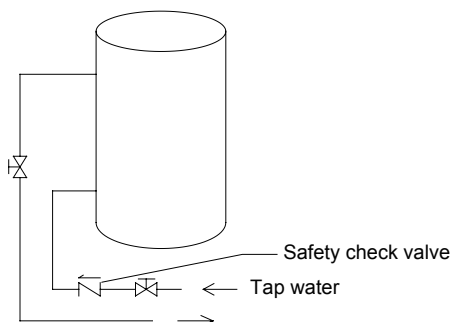

Note

(a) For safe use of water, water outlet/inlet of water tank must connect with a certain length of PPR pipe ,L $\geq 70 \times R2$ (cm, R is inside radius of the pipe). Moreover, heat preservation should be conducted and metal pipe cannot be used. For the first use, water tank must be full of water before the power is on.

18.2 Outline dimension and parameter of water tank

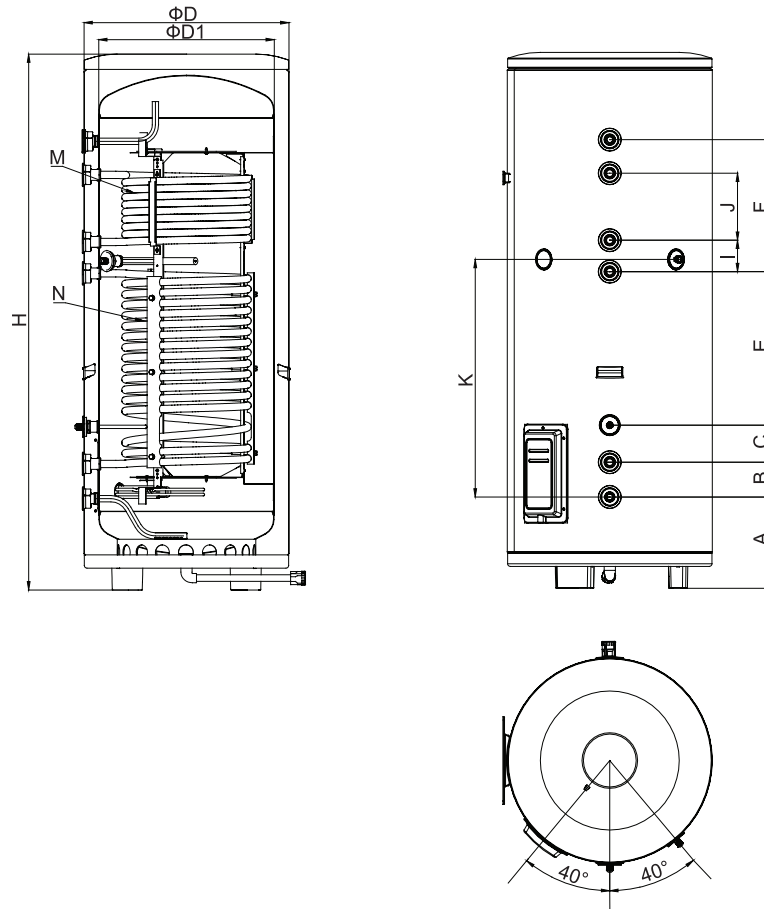


| Model | ML-SXVD200LCJ/A-K | ML-SXVD200LCJ2/A-K | ML-SXVD300LCJ/A-K | ML-SXVD300LCJ2/A-K | |
|------------------------------|-------------------|--------------------|-------------------|--------------------|-------|
| | ML-SXVD200LCJ/A-M | ML-SXVD200LCJ2/A-M | ML-SXVD300LCJ/A-M | ML-SXVD300LCJ2/A-M | |
| | ML-SXVD200LCJ/A-H | ML-SXVD200LCJ2/A-H | ML-SXVD300LCJ/A-H | ML-SXVD300LCJ2/A-H | |
| Litre | 200L | 200L | 300L | 300L | |
| Coil specification | SUS304 Φ22X0.8 | | | | |
| Coil length | M | \ | 10m | \ | 10m |
| | N | 13m | 13m | 18.5m | 18.5m |
| D(mm) | 540 | | 620 | | |
| D1(mm) | 438 | | 528 | | |
| H(mm) | 1595 | | 1620 | | |
| A(mm) | 272 | | 280 | | |
| B(mm) | 105 | | | | |
| C(mm) | 112 | | | | |
| E(mm) | 432 | | 464 | | |
| F(mm) | 431 | | 399 | | |
| I(mm) | \ | 80 | \ | 95 | |
| J(mm) | \ | 247.5 | \ | 202.5 | |
| K(mm) | 739 | | 718 | | |
| Outline (Diameter×H) (mm) | Φ540×1595 | | Φ620×1620 | | |
| Package (W×D×H) (mm) | 1623×628×645 | | 1648×708×725 | | |
| Net weight | kg | 68 | 71 | 82 | 87 |
| Gross weight | kg | 77 | 80 | 92 | 97 |

| Joints Dimension | |
|--|-------------------|
| Description | Joint pipe thread |
| Hot water outlet of water tank | 1/2"Female BSP |
| Circulating water inlet/outlet of water tank | 3/4"Female BSP |
| Cooling water inlet of water tank | 1/2"Female BSP |
| Pipe joint | 3/4"Female BSP |

18.3 Connection of waterway system

- (1) If connection between water tank and indoor unit should be through the wall, drill a hole $\phi 70$ for pass of circulating water pipe. It is unnecessary if the hole is not needed.
- (2) Preparation of pipelines: Circulating water outlet/inlet pipe must be hot water pipe, PPR pipe with nominal out diameter of dn25 and S2.5 series (wall thickness of 4.2mm) being recommended. Cooling water inlet pipe and hot water outlet pipe of water tank should also be hot water pipe, PPR pipe with nominal out diameter of dn20 and S2.5 series (wall thickness of 3.4mm) being recommended. If other insulated pipes are adopted, refer to the above dimensions for out diameter and wall thickness.
- (3) Installation of circulating water inlet/outlet pipes: connect the water inlet of the unit with circulating outlet of water tank and water outlet of unit with circulating inlet of water tank.
- (4) Installation of water inlet/outlet pipes of the water tank: safety check valve, filter and cut-off valve must be installed for the water inlet pipe according to the installation sketch of the unit. At least a cut-off valve is needed for the water outlet pipe.
- (5) Installation of blow-off pipes at the bottom of water tank: connect a piece of PPR pipe with drainage outlet to floor drain. A cut-off valve must be installed in the middle of the drainage pipe and at the place where it is easy to be operated by the users.
- (6) After connection of all waterway pipelines, perform the leakage test firstly. After that, bind up the water pipes, water temp sensor and wires with wrapping tapes attached with the unit.
- (7) Refer to Installation Sketch of the Unit for details.

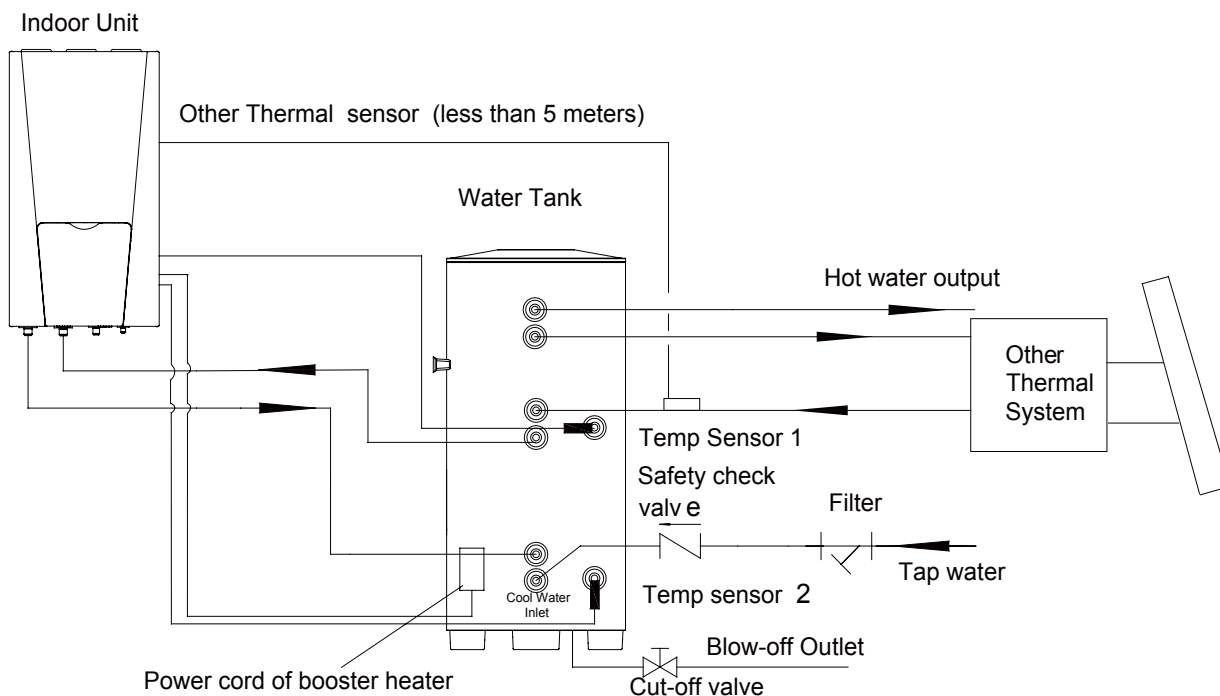

| Description | Joint pipe thread |
|--|-------------------|
| Circulating water inlet/outlet of main unit | 1"Male BSP |
| Cooling water inlet of water tank | 1/2"Female BSP |
| Circulating water inlet/outlet of water tank | 3/4"Female BSP |
| Hot water outlet of water tank | 1/2"Female BSP |

Notes

- (a) Distance between indoor unit and water tank should not exceed 5m levelly and 3m vertically. If higher, please contact with us. Water tank on lower and main unit on higher side is recommended.
- (b) Prepare the materials according to the above joints dimension. If cut-off valve is installed outside the room, PPR pipe is recommended to avoid freeze damage.
- (c) Waterway pipelines can't be installed until water heater unit is fixed. Do not let dust and other sundries enter into pipeline system during installation of connection pipes.
- (d) After connection of all waterway pipelines, perform leakage test firstly. After that, perform heat preservation of waterway system; meanwhile, pay more attention to valves and pipe joints. Ensure enough thickness of insulated cotton. If necessary, install heating device for pipeline to prevent the pipeline from freezing.
- (e) Hot water supplied from insulated water tank depends on pressure of water tap, so there must be supply of tap water.
- (f) During using, the cut-off valve of cooling water inlet of water tank should be kept normally on.

18.4 Electric wiring work**18.4.1 Wiring principle****General principles**

- (1) Wires, equipment and connectors supplied for use on the site must be in compliance with provisions of regulations and engineering requirements.
- (2) Only electricians holding qualification are allowed to perform wire connection on the site.
- (3) Before connection work is started, the power supply must be shut off.
- (4) Installer shall be responsible for any damage due to incorrect connection of the external circuit.
- (5) Only copper wires are allowed to be used.
- (6) Connection of power cable to the electric cabinet of the unit
- (7) Power cables should be laid out through cabling trough, conduit tube or cable channel.
- (8) Power cables to be connected into the electric cabinet must be protected with rubber or plastic to prevent scratch by edge of metal plate.
- (9) Power cables close to the electric cabinet of the unit must be fixed reliably to make the power terminal in the cabinet free from an external force.
- (10) Power cable must be grounded reliably.

18.4.2 Specification of power supply wire and leakage switch

Power cable specifications and Leakage switch types in the following list are recommended.

| Model | Power Supply | Leakage Switch | Minimum Sectional Area of Earth Wire | Minimum Sectional Area of Power Supply Wire |
|------------------------|------------------|----------------|--------------------------------------|---|
| | V,Ph,Hz | (A) | (mm ²) | (mm ²) |
| ML-RS-CQ8.0Pd/NaE-K(O) | 220-240,~,50Hz | 20 | 3.3 | 2×3.3 |
| ML-RS-CQ10Pd/NaE-K(O) | | 20 | 3.3 | 2×3.3 |
| ML-RS-CQ8.0Pd/NaE-K(I) | | 50 | 13.3 | 2×13.3 |
| ML-RS-CQ10Pd/NaE-K(I) | | 50 | 13.3 | 2×13.3 |
| ML-RS-CQ12Pd/NaE-K(O) | 220-240,~,50Hz | 30 | 5.3 | 2×5.3 |
| ML-RS-CQ14Pd/NaE-K(O) | | 30 | 5.3 | 2×5.3 |
| ML-RS-CQ16Pd/NaE-K(O) | | 30 | 5.3 | 2×5.3 |
| ML-RS-CQ12Pd/NaE-K(I) | | 50 | 13.3 | 2×13.3 |
| ML-RS-CQ14Pd/NaE-K(I) | | 50 | 13.3 | 2×13.3 |
| ML-RS-CQ16Pd/NaE-K(I) | | 50 | 13.3 | 2×13.3 |
| ML-RS-CQ12Pd/NaE-M(O) | 380-415,3N~,50Hz | 25 | 3.3 | 4×3.3 |
| ML-RS-CQ14Pd/NaE-M(O) | | 25 | 3.3 | 4×3.3 |
| ML-RS-CQ16Pd/NaE-M(O) | | 25 | 3.3 | 4×3.3 |
| ML-RS-CQ12Pd/NaE-M(I) | | 20 | 3.3 | 4×3.3 |
| ML-RS-CQ14Pd/NaE-M(I) | | 20 | 3.3 | 4×3.3 |
| ML-RS-CQ16Pd/NaE-M(I) | | 20 | 3.3 | 4×3.3 |


Notes

- Leakage Switch is necessary for additional installation. If circuit breakers with leakage protection are in use, action response time must be less than 0.1 second, leakage circuit must be 30mA.
- The above selected power cable diameters are determined based on assumption of distance from the distribution cabinet to the unit less than 75m. If cables are laid out in a distance of 75m to 150m, diameter of power cable must be increased to a further grade.
- The power supply must be of rated voltage of the unit and special electrical line for air-conditioning.
- All electrical installation shall be carried out by professional technicians in accordance with the local laws and regulations.
- Ensure safe grounding and the grounding wire shall be connected with the special grounding equipment of the building and must be installed by professional technicians.
- The specifications of the breaker and power cable listed in the table above are determined based on the maximum power (maximum amps) of the unit.
- The specifications of the power cable listed in the table above are applied to the conduit-guarded multi-wire copper cable (like, YJV XLPE insulated power cable) used at 40℃ and resistible to 90℃ (see IEC 60364-5-52). If the working condition changes, they should be modified according to the related national standard. Power lines used outdoor should at least comply with 60245 IEC57.
- The specifications of the breaker listed in the table above are applied to the breaker with the working temperature at 40℃. If the working condition changes, they should be modified according to the related national standard.

19. Wiring Diagram


19.1 Control Board

- (1) Main Board (AP2): ML-RS-CQ8.0Pd/NaE-K(O), ML-RS-CQ10Pd/NaE-K(O) , ML-RS-CQ12Pd/NaE-K(O)), ML-RS-CQ14Pd/NaE-K(O), ML-RS-CQ16Pd/NaE-K(O), ML-RS-CQ12Pd/NaE-M(O), ML-RS-CQ14Pd/ NaE-M(O), ML-RS-CQ12Pd/NaE-M(O)

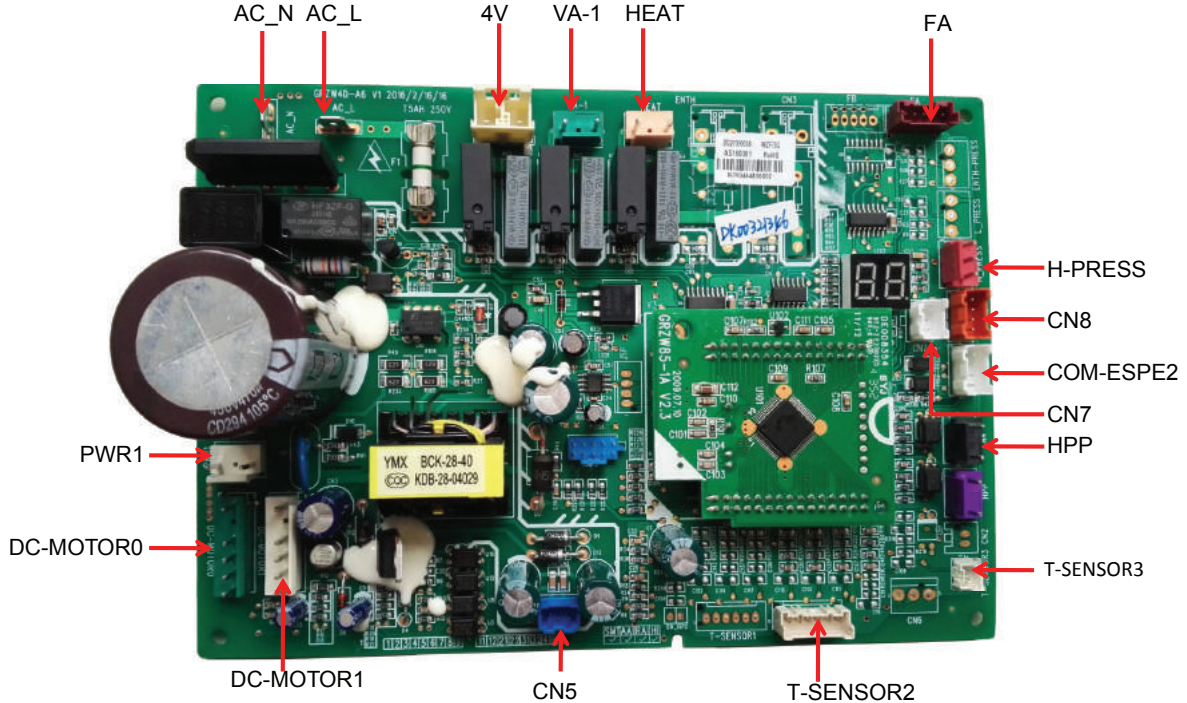

| Silk Screen | Specification |
|-------------|--|
| AC_N | Neutral wire input of power supply |
| AC_L | Live wire input of power supply |
| 4V | 4-way valve |
| VA-1 | E-heater of chassis |
| HEAT | Electric heating tape |
| FA | To EXV1, pipe electric expansion valve, 1-4 pin: driving impulse output; 5 pin: +12V; |
| H-PRESS | Signal input of pressure sensor 1 pin: GND; 2 pin: signal input; 3 pin: +5V; |
| CN8 | To the wired controller, communication cable: 1 pin earthed, 2 pin B, 3 pin A, 4 pin+12power supply; |
| CN7 | Communication between AP1 and AP2; communication cable 2 pin B, 3 pinA |
| COM-ESPE2 | Pin for communication with the drive |
| HPP | High pressure switch |
| T-SENSOR3 | 1 hole: +3.3V 2 hole: detection ; suction temperature sensor |
| T-SENSOR2 | 1, 2 hole: pipe temperature; 3, 4 hole: environment; 5, 6 hole: exhaust |
| CN5 | Supply 18V DC power to the drive. |
| DC-MOTOR1 | DC fan 1 pin: strong power supply; 3 pin: fan GND; 4 pin: +15V; 5 pin: control signal; 6pin:feedback signal; |
| DC-MOTOR0 | DC fan 1 pin: strong power supply; 3 pin: fan GND; 4 pin: +15V; 5 pin: control signal; 6pin:feedback signal; |
| PWR1 | Supply 310V DC power to the drive. |

(2) Main Board (AP1): ML-RS-CQ8.0Pd/NaE-K(I), ML-RS-CQ10Pd/NaE-K(I) , ML-RS-CQ12Pd/NaE-K(I), ML-RS-CQ14Pd/NaE-K(I) , ML-RS-CQ16Pd/NaE-K(I), ML-RS-CQ12Pd/NaE-M(I), ML-RS-CQ14Pd/NaE-M(I), ML-RS-CQ16Pd/NaE-M(I)

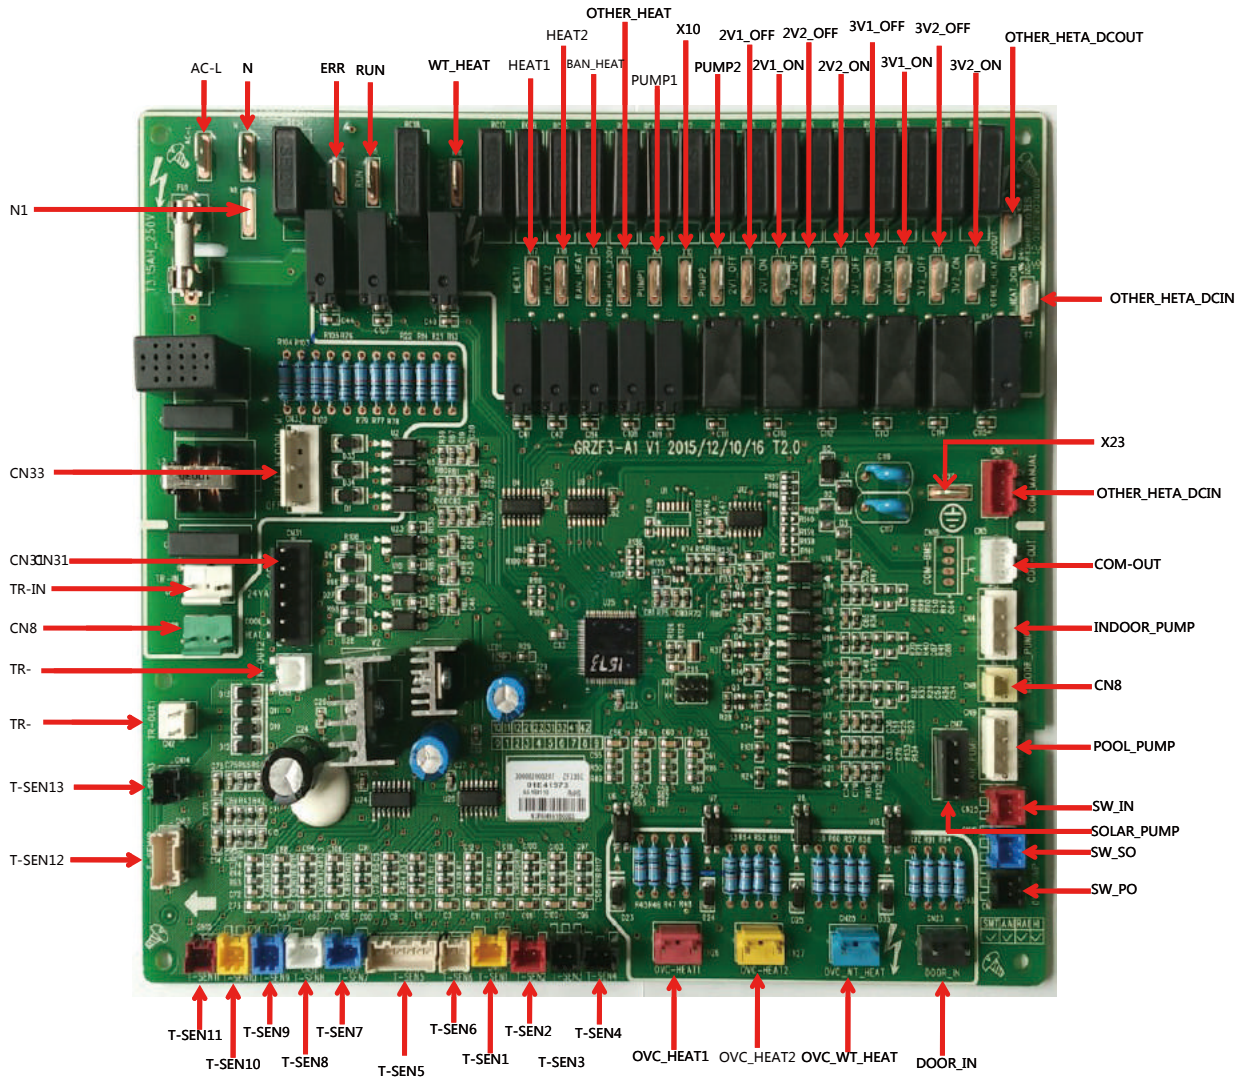


| Silk Screen | Location | Introduction |
|-------------|----------|---------------------------------------|
| AC-L | AC-L | Live wire of power supply |
| N | N | Neutral wire of power supply |
| N1 | N1 | Reserved |
| TR-IN | CN1 | 220V input of transformer |
| TR-OUT1 | CN2 | Transformer output 1 (12V) |
| TR-OUT2 | CN3 | Transformer output 2 (24V) |
| X23 | X23 | To the ground (Reserved) |
| T-SEN5 | CN10 | Leaving Water Temperature of the PHE |
| | | Entering Water Temperature of the PHE |
| | | Liquid Temperature Sensor of the PHE |
| T-SEN1 | CN11 | Water Tank Temperature Sensor 1 |
| T-SEN6 | CN12 | Water Tank Temperature Sensor 2 |

| | | |
|------------------|------|---|
| T-SEN12 | CN13 | Gas Temperature Sensor of the PHE |
| | | Leaving Water Temperature of the Electric Heate |
| T-SEN13 | CN14 | Remote room temp sensor2(Reserved) |
| T-SEN11 | CN15 | Remote room temp sensor1 |
| T-SEN4 | CN20 | Reserved |
| T-SEN2 | CN21 | Reserved |
| T-SEN3 | CN22 | Reserved |
| T-SEN10 | CN24 | Solar water-in temp sensor |
| T-SEN7 | CN29 | Solar water-out temp sensor |
| T-SEN9 | CN30 | Solar board temp sensor |
| T-SEN8 | CN32 | Reserved |
| SW_SO | CN16 | Solar waterflow switch |
| SW_PO/OV_PUMP | CN17 | Reserved |
| SW_IN | CN25 | Indoor units waterflow switch |
| OVC-HEAT1 | CN26 | E-heater of indoor unit1 adhesion-proof protection detector |
| OVC-HEAT2 | CN27 | E-heater of indoor unit2 adhesion-proof protection detector |
| OVC-WT_HEAT | CN28 | E-heater of water tank adhesion-proof protection detector |
| DOOR_IN | CN23 | Door detection input |
| CN18 | CN18 | Power supply interface of the thermostat (220~240V) |
| HEAT_M2 | CN31 | Power supply interface and control signal of the thermostat (24V) |
| COOL_M2 | | |
| 24VAC | | |
| OFF2 | | |
| OFF1 | CN33 | Control signal of the thermostat |
| HEAT_M1 | | |
| COOL_M1 | | |
| COM_OUT | CN5 | Connect to AP2 |
| COM_MANUAL | CN6 | Connect the wired controller |
| COM_BMS | CN19 | Reserved |
| OTHER_HEAT_DCOUT | X1 | The dc output of assistant heat |
| OTHER_HEAT_DCIN | X2 | The dc input of assistant heat |
| RUN | X15 | Running indicator |
| ERR | X19 | Error indicator |
| WT_HEAT | X16 | E-heater of water tank |
| HEAT1 | X17 | E-heater 1 |
| HEAT2 | X18 | E-heater 2 |
| BAN_HEAT | X3 | Reserved |
| PUMP1 | X5 | Reserved |
| OTHER_HEAT | X6 | Assistant heat by 220VAC |
| PUMP2 | X9 | Reserved |
| X10 | X10 | Reserved |

Air-to-water Heat Pump Split Unit


| | | |
|-------------|-----|--|
| 2V1_ON | X7 | Electric magnetic 2-way valve 1 is normally open |
| 2V1_OFF | X8 | Electric magnetic 2-way valve 1 is normally closed |
| 3V2_ON | X12 | Electric magnetic 3-way valve 2 is normally open |
| 3V2_OFF | X11 | Electric magnetic 3-way valve 2 is normally closed |
| INDOOR_PUMP | CN4 | Control of the water pump for the main unit |
| CN8 | CN8 | Reserved |
| SOLAR_PUMP | CN7 | Control of the water pump for solar system |

(3) Drive Board (AP4): ML-RS-CQ8.0Pd/NaE-K(O),ML-RS-CQ10Pd/NaE-K(O)

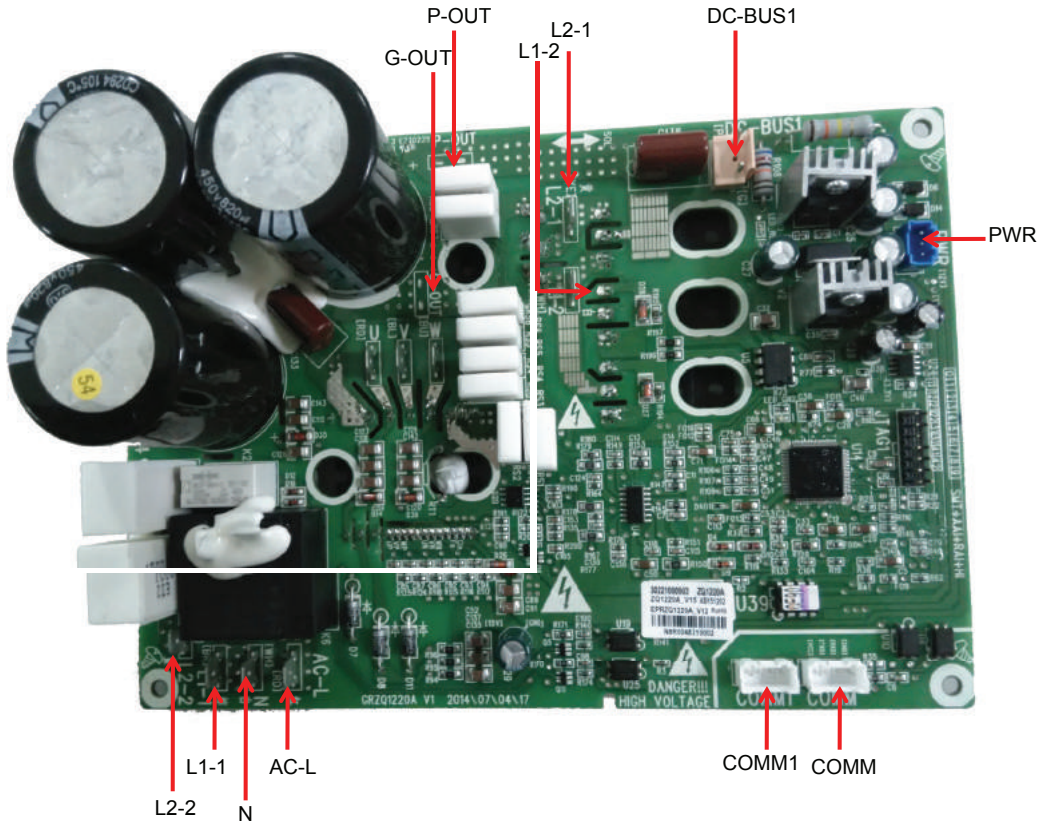


| Silk Screen | Introduction |
|-------------|---|
| AC-L | Live line input of the drive board |
| N | Neutral line input of the drive board |
| L1-1 | To PFC inductor brown line |
| L1-2 | To PFC inductor white line |
| L2-1 | To PFC inductor white line |
| L2-2 | To PFC inductor blue line |
| U | To compressor phase U |
| V | To compressor phase V |
| W | To compressor phase W |
| DC-BUS1 | Pin for electric discharge of the high-voltage bar during test. |
| P-OUT | Reserved |
| G-OUT | Reserved |
| COMM | Communication interface[1-3.3V,2-TX,3-RX,4-GND] |
| COMM1 | Communication interface[1-3.3V,2-TX,3-RX,4-GND] |
| PWR | Power input of the drive board [1-GND,2-18V,3-15V] |

(4) Drive Board (AP4):ML-RS-CQ12Pd/NaE-K(O) , ML-RS-CQ14Pd/NaE-K (O), ML-RS-CQ16Pd/NaE-K(O)

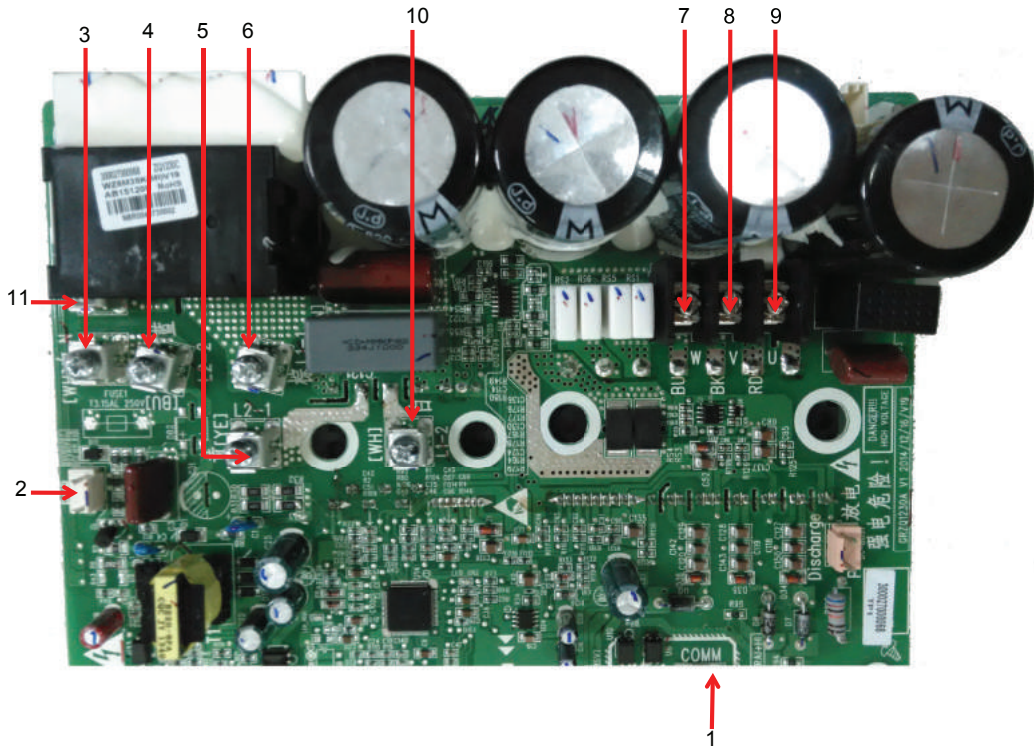

| No | Silk Screen | Introduction |
|----|-------------|---|
| 1 | COMM | Communication interface [1-3.3V, 2-TX, 3-RX, 4-GND] |
| 2 | PWR | Switch power interface [1-310VDC, 3-GND] |
| 3 | N | Neutral line input of the drive board |
| 4 | L2-2 | Connector to L2-2 of PFC reactor 2 |
| 5 | L2-1 | Connector to L2-1 of PFC reactor 2 |
| 6 | L1-1 | Connector to L1-1 OF PFC reactor 1 |
| 7 | W | Connector to the compressor phase-W |
| 8 | V | Connector to the compressor phase-V |
| 9 | U | Connector to the compressor phase-U |
| 10 | L1-2 | Connector to L1-2 OF PFC reactor 1 |
| 11 | AC-L | Live line input of the drive board |

(5) Drive Board (AP4):ML-RS-CQ12Pd/NaE-M(O), ML-RS-CQ14Pd/NaE-M(O), ML-RS-CQ16Pd/NaE-M(O)

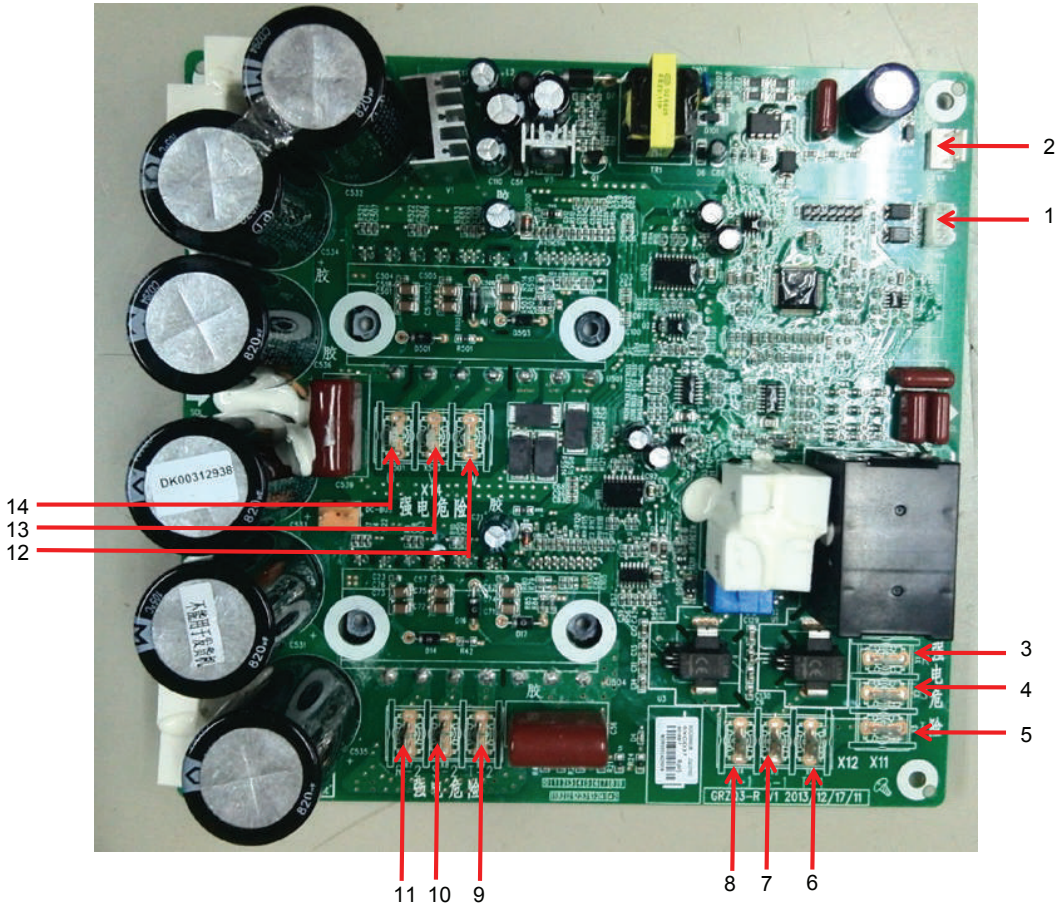

| No | Silk Screen | Introduction |
|----|-------------|---|
| 1 | COMM | Communication interface [1-3.3V, 2-TX, 3-RX, 4-GND] |
| 2 | PWR | Switch power interface [1-310VDC, 3-GND] |
| 3 | X1 | Connector to filter R |
| 4 | X2 | Connector to filter S |
| 5 | X3 | Connector to filter T |
| 6 | X6 | Connector to T-1 OF PFC reactor 3 |
| 7 | X5 | Connector to S-1 OF PFC reactor 2 |
| 8 | X4 | Connector to R-1 OF PFC reactor 1 |
| 9 | X7 | Connector to T-2 of PFC reactor 3 |
| 10 | X8 | Connector to R-2 of PFC reactor 2 |
| 11 | X9 | Connector to S-2 of PFC reactor 1 |
| 12 | X503 | Connector to the compressor phase-W |
| 13 | X502 | Connector to the compressor phase-V |
| 14 | X501 | Connector to the compressor phase-U |

(6) Filter Board (AP3):ML-RS-CQ8.0Pd/NaE-K(O),ML-RS-CQ10Pd/NaE-K(O)



| Silk Screen | Introduction |
|-------------|---|
| AC-N | Neutral line of the power supply for the main unit |
| AC-L | Live line of the power supply for the main unit |
| N-OUT | Neutral line output of the filter board (to the drive board) |
| | Neutral line output of the filter board (to the main board) |
| L-OUT | Live line output of the filter board (to the drive and main boards) |
| E1 | To the grounding line of the main unit |

(7) Filter Board (AP3):ML-RS-CQ12Pd/NaE-K(O) , ML-RS-CQ14Pd/NaE-K(O) , ML-RS-CQ16Pd/NaE-K(O)



| Silk Screen | Introduction |
|-------------|---|
| AC-N | Neutral line of the power supply for the main unit |
| AC-L | Live line of the power supply for the main unit |
| N-OUT | Neutral line output of the filter board (to the drive board) |
| | Neutral line output of the filter board (to the main board) |
| L-OUT | Live line output of the filter board (to the drive and main boards) |

(8) Filter Board (AP3):ML-RS-CQ12Pd/NaE-M(O), ML-RS-CQ14Pd/NaE-M(O), ML-RS-CQ16Pd/NaE-M(O)



| No. | Silk Screen | Introduction |
|-----|-------------|--|
| 1 | X1 | U line of the power supply for the main unit |
| 2 | X2 | V line of the power supply for the main unit |
| 3 | X3 | W line of the power supply for the main unit |
| 4 | X4 | Ground line of the power supply for the main unit |
| 5 | X5 | U line output of the filter board (to the drive board) |
| 6 | X6 | V line output of the filter board (to the drive board) |
| 7 | X7 | W line output of the filter board (to the drive and main boards) |

19.2 Electric Wiring

19.2.1 Wiring principle

Refer to Section 18.4.


Air-to-water Heat Pump Split Unit

19.2.2 Electric wiring design


The wiring diagram stuck to the unit always prevails.

(1) Wiring diagram: indoor unit

ML-RS-CQ8.0Pd/NaE-K(I), ML-RS-CQ10Pd/NaE-K(I), ML-RS-CQ12Pd/NaE-K(I), ML-RS-CQ14Pd/NaE-K(I), ML-RS-CQ16Pd/NaE-K(I)

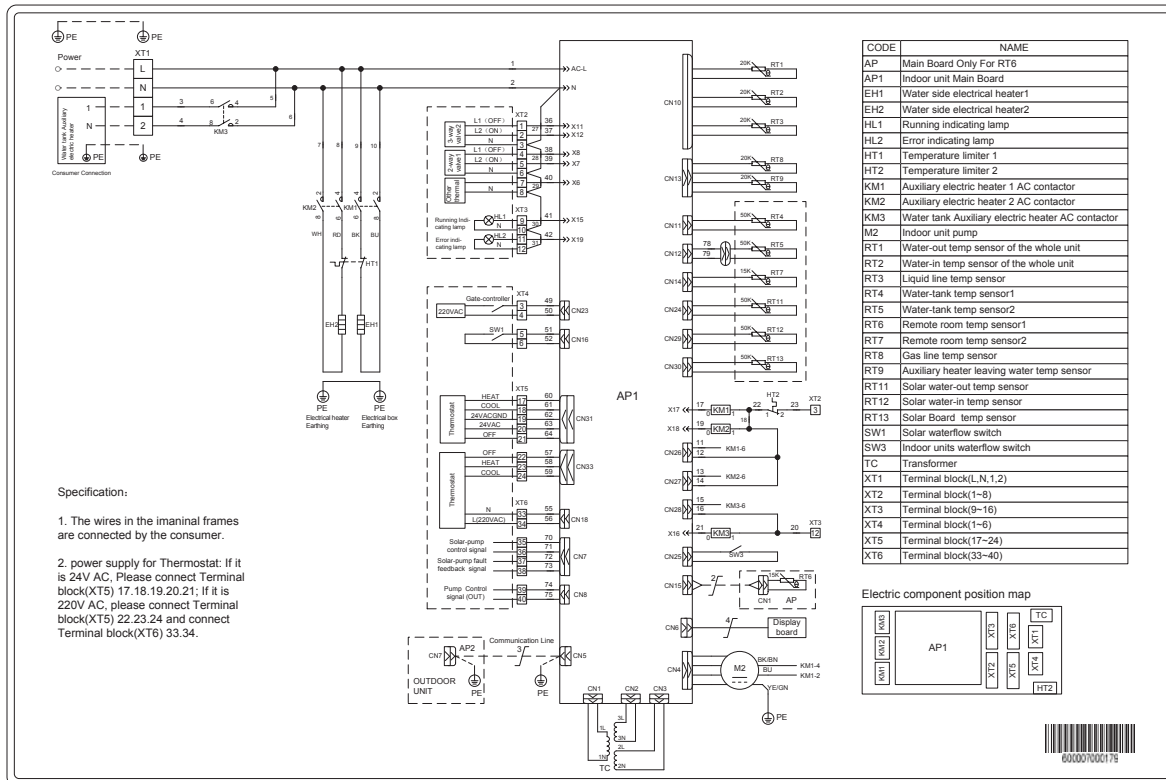


ML-RS-RS-CQ12Pd/NaE-M(I), ML-RS-RS-CQ14Pd/NaE-M(I), ML-RS-RS-CQ16Pd/NaE-M(I)

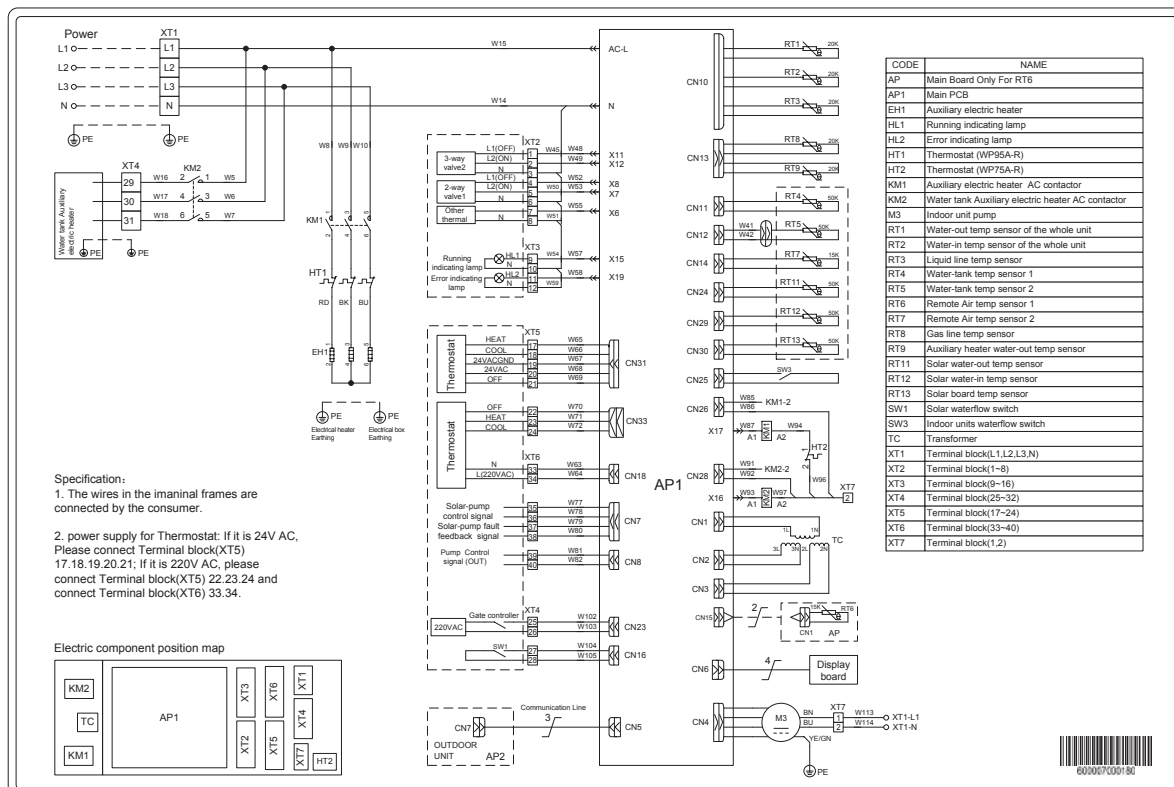


(2) Wiring diagram: outdoor unit


- ML-RS-CQ8.0Pd/NaE-K(O), ML-RS-CQ10Pd/NaE-K(O)

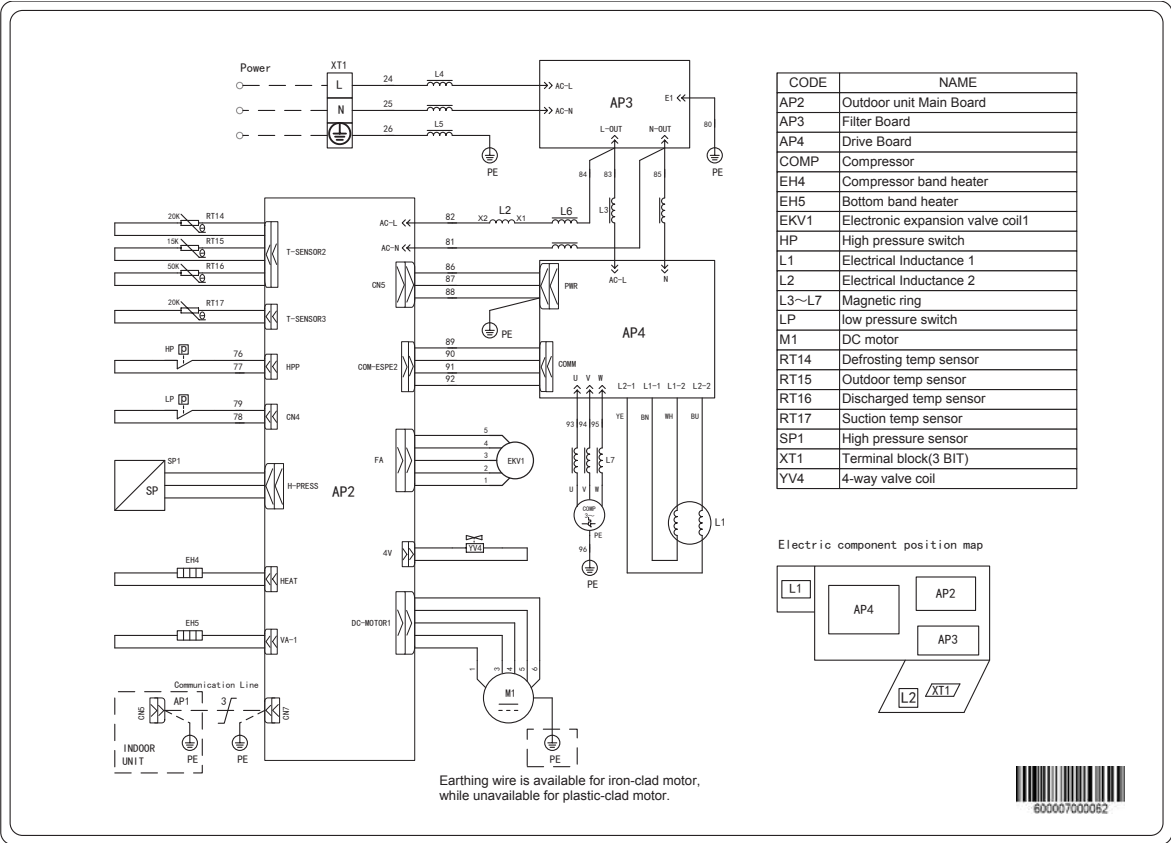

- ML-RS-CQ12Pd/NaE-K(O), ML-RS-CQ14Pd/NaE-K(O), ML-RS-CQ16Pd/NaE-K(O)

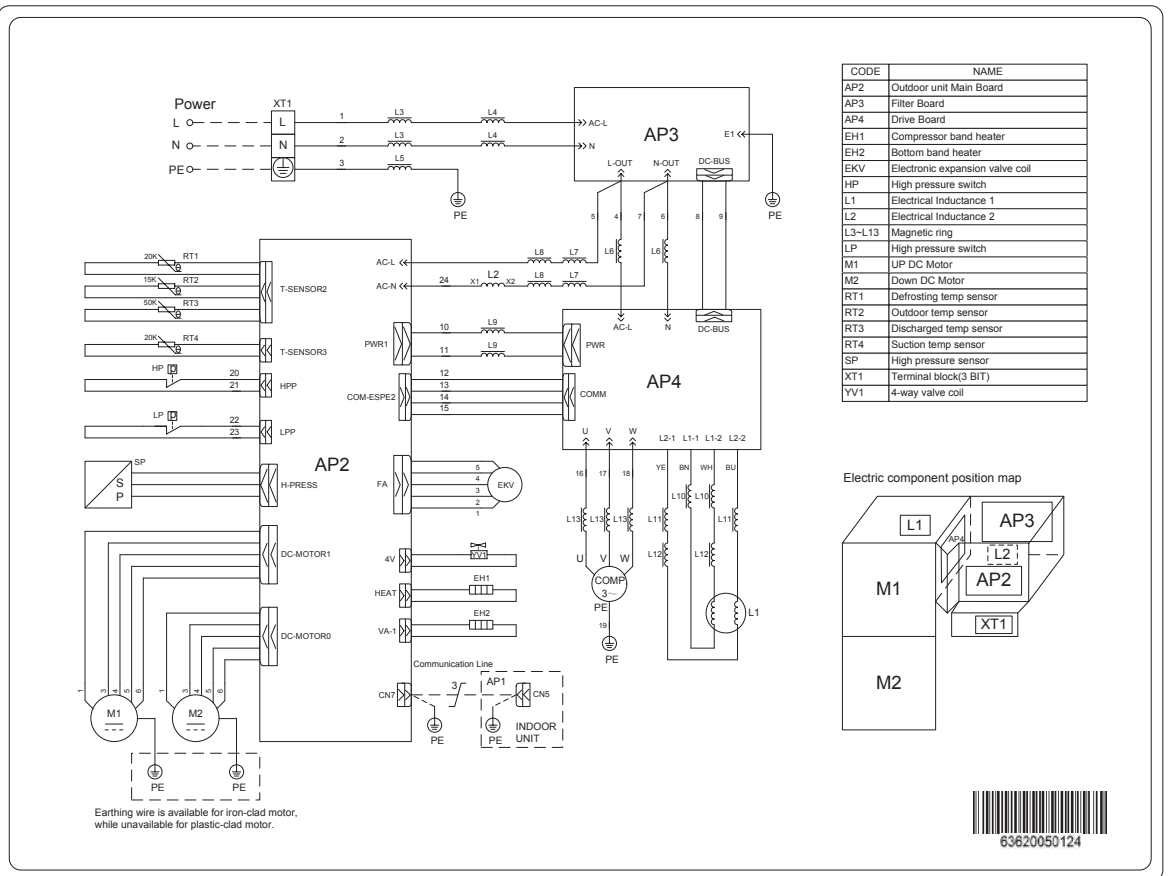


- ML-RS-CQ12Pd/NaE-M(O), ML-RS-CQ14Pd/NaE-M(O), ML-RS-CQ16Pd/NaE-M(O)

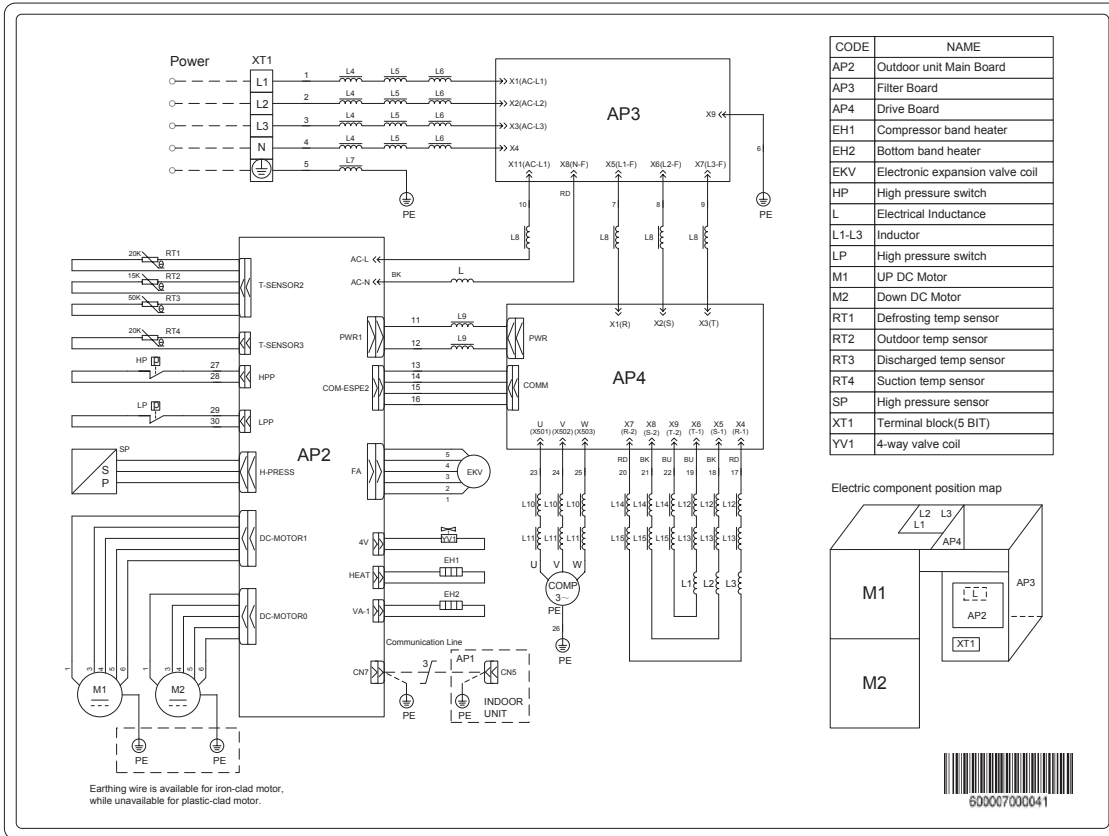


19.2.3 Terminal Board

- (1) ML-RS-CQ8.0Pd/NaE-K(I), ML-RS-CQ10Pd/NaE-K(I), ML-RS-CQ12Pd/NaE-K(I), ML-RS-CQ14Pd/NaE-K(I), ML-RS-CQ16Pd/NaE-K(I)

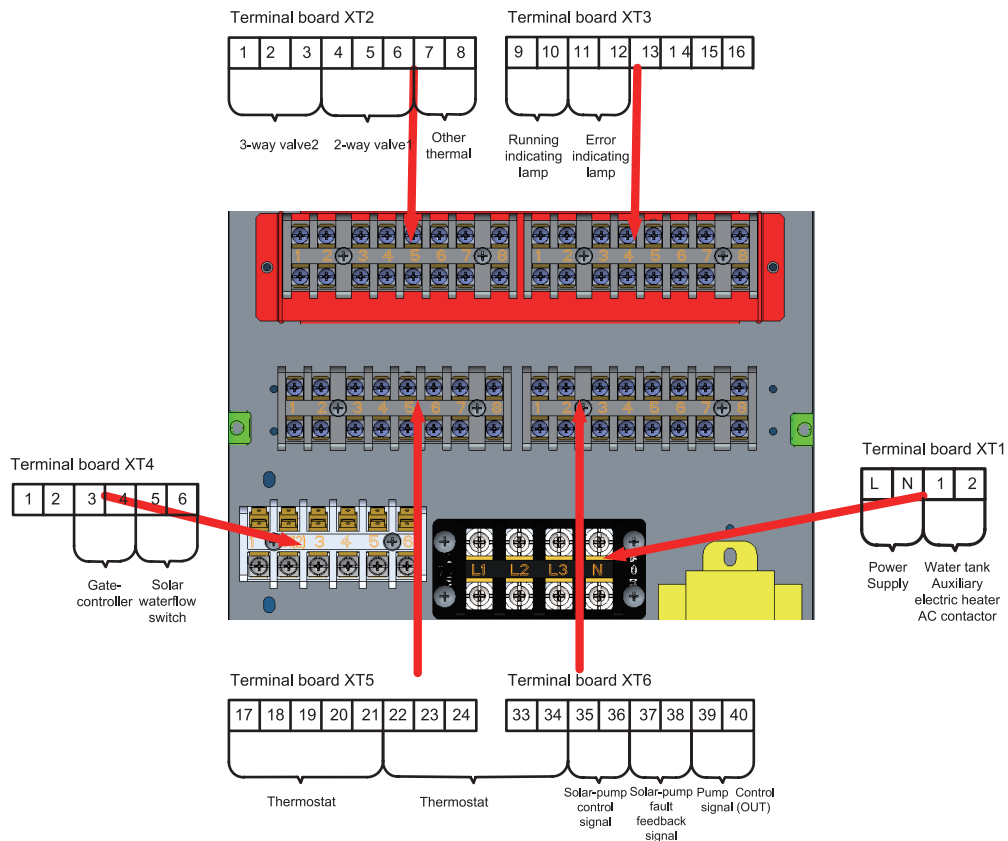

(2) ML-RS-CQ12Pd/NaE-M(I),ML-RS-CQ14Pd/NaE-M(I),ML-RS-CQ16Pd/NaE-M(I)

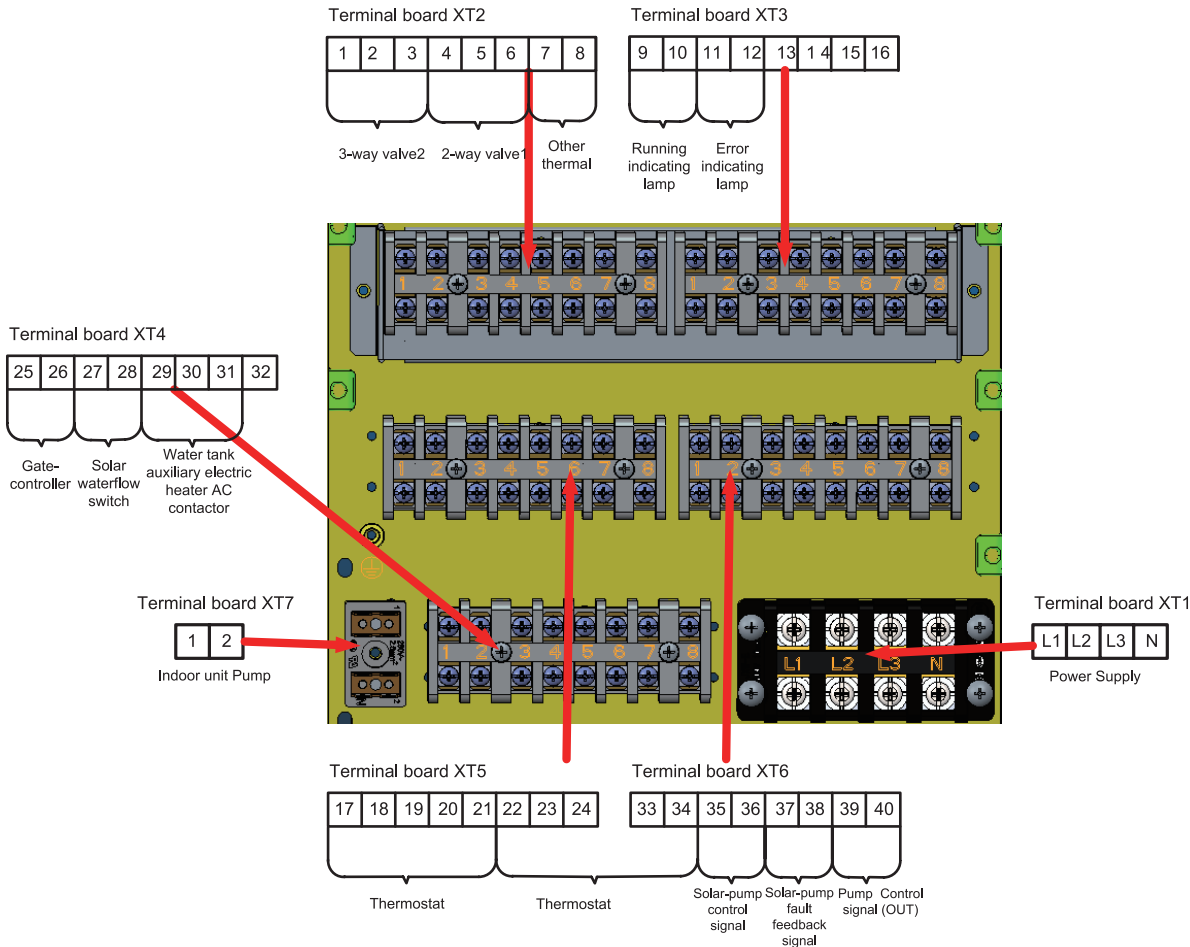

20. Commissioning

20.1 Check before startup

For safety of users and unit, the unit must be started up for check before debugging. The procedures are as below:

| | | |
|---|--|---|
| The following items shall be performed by qualified repair persons. | | |
| Confirm together with the sales engineer, dealer, installing contractor and customers for the following items finished or to be finished. | | |
| No. | Confirmation of Installation | √ |
| 1 | If the contents of Application for Installation of this Unit by Installer are real. If not, debugging will be refused. | □ |
| 2 | Is there written notice in which amendment items are shown in respect of unqualified installation? | □ |
| 3 | Are Application for Installation and Debugging list filed together? | □ |
| No. | Pre-check | √ |
| 1 | Is appearance of the unit and internal pipeline system ok during conveying, carrying or installation? | □ |
| 2 | Check the accessories attached with the unit for quantity, package and so on. | □ |
| 3 | Make sure there is drawings in terms of electricity, control, design of pipeline and so on. | □ |
| 4 | Check if installation of the unit is stable enough and there is enough space for operation and repair. | □ |
| 5 | Completely test refrigerant pressure of each unit and perform leakage detection of the unit. | □ |
| 6 | Is the water tank installed stably and are supports secure when the water tank is full? | □ |
| 7 | Are heat insulating measures for the water tank, outlet/inlet pipes and water replenishing pipe proper? | □ |

| | | |
|----|--|--------------------------|
| 8 | Are the nilometer of water tank, water temperature indicator, controller, manometer, pressure relief valve and automatic discharge valve etc. installed and operated properly? | <input type="checkbox"/> |
| 9 | Does power supply accord with the nameplate? Do power cords conform to applicable requirements? | <input type="checkbox"/> |
| 10 | Is power supply and control wiring connected properly according to wiring diagram? Is earthing safe? Is each terminal stable? | <input type="checkbox"/> |
| 11 | Are connection pipe, water pump, manometer, thermometer, valve etc. are installed properly? | <input type="checkbox"/> |
| 12 | Is each valve in the system open or closed according to requirements? | <input type="checkbox"/> |
| 13 | Confirm that the customers and inspection personnel of Part A are at site. | <input type="checkbox"/> |
| 14 | Is Installation Check-up Table completed and signed by the installation contractor? | <input type="checkbox"/> |

NOTE: If there is any item marked with ×, please notify the contractor. Items listed above are just for reference.

| | | |
|------------------------------------|--|------------------------|
| Confirmed Items after pre-checking | General Evaluation: Debugging <input type="checkbox"/> Amendment <input type="checkbox"/> | |
| | Judge the following items (if there is not any filling, qualification will be regarded.) | |
| | a: Power supply and electric control system | b: Loading calculation |
| | c: Heating problems of Unit | d: Noise problem |
| | e: Pipeline problem | f: Others |
| | Normal debugging work can't be performed unless all installation items are qualified. If there is any problem, it must be solved firstly. The installer will be responsible for all costs for delay of debugging and re-debugging incurred by any problem which is not solved immediately. | |
| | Submit schedule of amending reports to installer. | |
| | Is the written amending report which should be signed after communication provided to installer? | |
| Yes () No () | | |

20.2 Test run

Test run is testing whether the unit can run normally via preoperation. If the unit cannot run normally, find and solve problems until the test run is satisfactory. All inspections must meet the requirements before performing the test run. Test run should follow the content and steps of the table below:

| | |
|---|---|
| The following procedure should be executed by experience and qualified maintenance men. | |
| No. | Start up the pretest procedure |
| Notice: before test, ensure that all power must be cut off, including the far- end power switch, otherwise, it may cause casualty. | |
| 1 | Ensure that the compressor of the unit is preheated for 8h. |
| NOTE: heat the lubricating oil at least 8h in advance to prevent refrigerant from mixing with the lubricating oil, which may cause damage to the compressor when starting up the unit. | |
| 2 | Check whether the oil temperature of the compressor is obviously higher than the outdoor ambient temperature. |
| NOTE: if the oil temperature of the compressor is obviously higher than the outdoor ambient temperature, it means that the heating tape of compressor is damaged. In that case, the compressor will be damaged easily. Therefore, repair the heating tape before using the unit. | |
| 3 | Check whether the phase sequence of the main power supply is correct. If not, correct the phase sequence firstly. |
| NOTE: recheck the phase sequence before start-up to avoid reverse rotation of the compressor which may damage the unit. | |
| 4 | Apply the universal electric meter to measure the insulation resistance between each outdoor phase and earth as well as between phases. |
| NOTE: defective earthing may cause electric shock. | |
| No. | Ready to start |

| | |
|--|---|
| 1 | Cut off all temporary power supply, resume all the insurance and check the electricity for the last time. |
| | Check the power supply and voltage of the control circuit; _____V must be $\pm 10\%$ within the range of rated operating power. |
| No. | Start up the unit |
| 1 | Check all the conditions needed to start up the unit: oil temperature, mode, required load etc. |
| 2 | Start up the unit, and observe the operation of compressor, electric expanding valve, fan motor and water pump etc. |
| | Note: the unit will be damaged under abnormal running state. Do not operate the unit in states of high pressure and high current. |
| Others: | |
| Items for acceptance after debugging | Estimation or suggestion on the general running situation: good, modify |
| | Identify the potential problem (nothing means the installation and debugging are in accordance with the requirements.) |
| | a. problem of power supply and electric control system: |
| | b. problem of load calculation: |
| | c. outdoor refrigerant system: |
| | d. noise problem: |
| | e. problem of indoor and piping system: |
| | h. other problems: |
| During operation, it is needed to charge for the maintenance due to non-quality problems such as incorrect installation and maintenance. | |
| Acceptance | |
| Is the user trained as required? Please sign. Yes() No() | |

21. Daily Operation and Maintenance

In order to avoid damage of the unit, all protecting devices in the unit had been set before delivery, so please do not adjust or remove them.

For the first startup of the unit or next startup of unit after long-period stop (above 1 day) by cutting off the power, please electrify the unit in advance to preheat the unit for more than 8 hours.

Never put sundries on the unit and accessories. Keep dry, clean and ventilated around the unit.

Remove the dust accumulated on the condenser fin timely to ensure performance of the unit and to avoid stop of the unit for protection.

In order to avoid protection or damage of the unit caused by blockage of the water system, clean the filter in water system periodically and frequently check water replenishing device.

In order to ensure anti-freezing protection, never cut off the power if ambient temperature is below zero in winter.

In order to avoid frost crack of the unit, water in the unit and pipeline system not used for a long period should be drained. In addition, open the end cap of the water tank for drainage.

When the water tank has been installed but the water tank is set to "Without", functions relative with the water tank will not work and the displayed water tank temperature will always be "-30". In this case, the water tank would suffer frostbite and even other severe influences under low temperature. Therefore, once the water tank has been installed, the water tank must be set to "With", otherwise ML Electronics will not be responsible for this abnormal operation.

Never frequently make the unit on/off and close the manual valve of the water system during operation of the unit by users.

Ensure frequent check to the working condition of each part to see if there is oil stain at pipeline joint and charge valve to avoid leakage of refrigerant.

If malfunction of the unit is out of control of users, please timely contact with authorized service center.


The water pressure gage is installed in the returning water line in the unit. Please adjust the hydraulics system

pressure according to next item:

- (1) If the pressure is less than 0.5 bar, please recharge the water immediately;
- (2) When recharging, the hydraulics system pressure should be not more than 2.5 Bar.

Troubleshooting

| Malfunctions | Reasons | Troubleshooting |
|---|--|--|
| Compressor does not start up | <ul style="list-style-type: none"> ① Power supply has problem. ② Connection wire is loose. ③ Malfunction of mainboard. ④ Malfunction of compressor. | <ul style="list-style-type: none"> ① Phase sequence is reverse. ② Check out and re-fix. ③ Find out the reasons and repair. ④ Replace compressor. |
| Heavy noise of fan | <ul style="list-style-type: none"> ① Fixing bolt of fan is loose. ② Fan blade touches shell or grill. ③ Operation of fan is unreliable. | <ul style="list-style-type: none"> ① Re-fix fixing bolt of fan. ② Find out the reasons and adjust. ③ Replace fan. |
| Heavy noise of compressor | <ul style="list-style-type: none"> ① Liquid slugging happens when liquid refrigerant enters into compressor. ② Internal parts in compressor are broken. | <ul style="list-style-type: none"> ① Check if expansion valve is failure and temp. sensor is loose. If that, repair it. ② Replace compressor. |
| Water pump does not run or runs abnormally | <ul style="list-style-type: none"> ① Malfunction of power supply or terminal. ② Malfunction of relay. ③ There is air in water pipe. | <ul style="list-style-type: none"> ① Find out the reasons and repair. ② Replace relay. ③ Evacuate. |
| Compressor starts or stops frequently | <ul style="list-style-type: none"> ① Poor or excess refrigerant. ② Poor circulation of water system. ③ Low load. | <ul style="list-style-type: none"> ① Discharge or add part of refrigerant. ② Water system is blocked or there is air in it. Check water pump, valve and pipeline. Clean water filter or evacuate. ③ Adjust the load or add accumulating devices. |
| The unit does not heat although compressor is running | <ul style="list-style-type: none"> ① Leakage of refrigerant. ② Malfunction of compressor. | <ul style="list-style-type: none"> ① Repair by leakage detection and add refrigerant. ② Replace compressor. |
| Poor efficiency of hot water heating | <ul style="list-style-type: none"> ① Poor heat insulation of water system. ② Poor heat exchange of evaporator. ③ Poor refrigerant of unit. ④ Blockage of heat exchanger at water side. | <ul style="list-style-type: none"> ① Enhance heat insulation efficiency of the system. ② Check if air in or out of unit is normal and clean evaporator of the unit. ③ Check if refrigerant of unit leaks. ④ Clean or replace heat exchanger. |

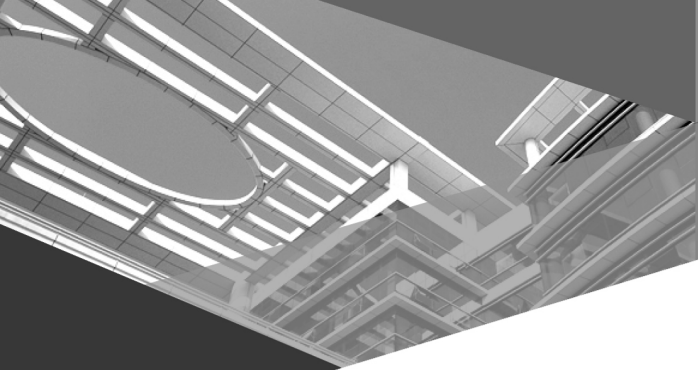

MegaLife

www.megalife.ma

Made BY ML ELECTRONICS



66129931307